


**If Problems:** Check that correct adapter has been used and links are in the correct place. Always disconnect from the power supply if you change the head-unit adapter lead. Check that Red wire is 12V ignition and not Permanent power. Check that head-unit is earthed and black wire is earth. Check all connections are the same as the wiring diagram shown here. Swap white and grey wires if functions are reversed!

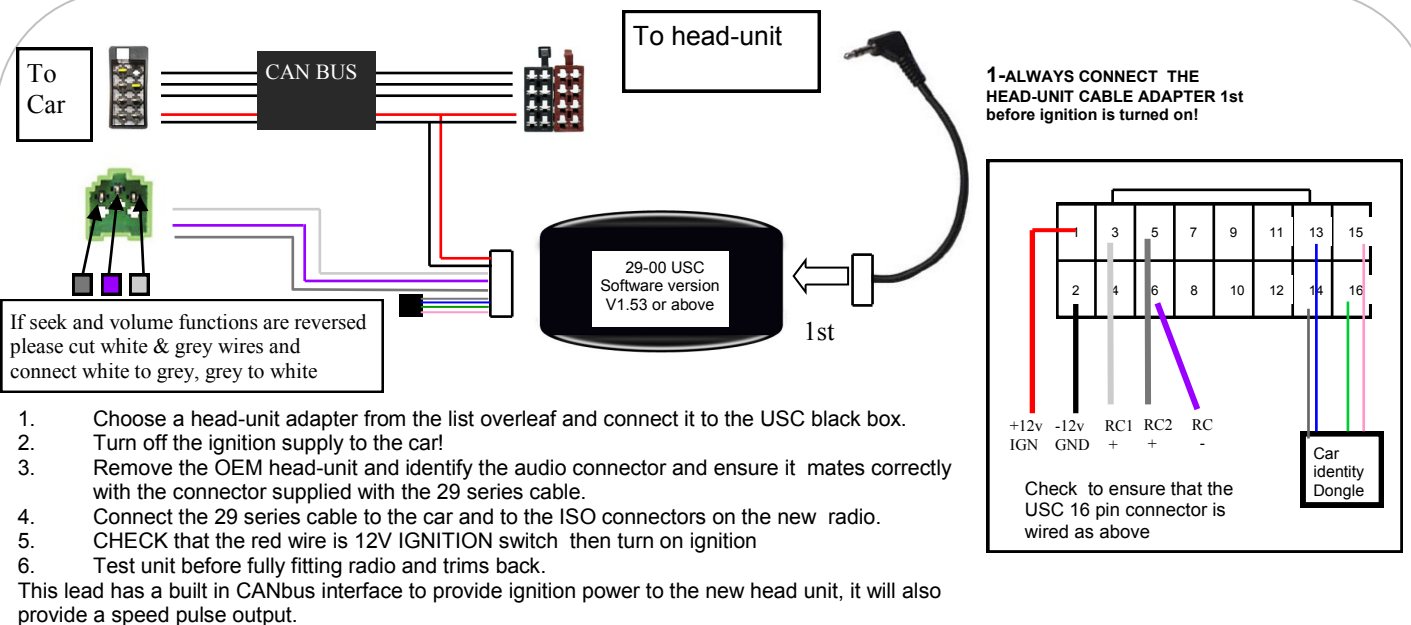

 
**If Problems:** Check that correct adapter has been used and links are in the correct place. Always disconnect from the power supply if you change the head-unit adapter lead. Check that Red wire is 12V ignition and not Permanent power. Check that head-unit is earthed and black wire is earth. Check all connections are the same as the wiring diagram shown here. Swap white and grey wires if functions are reversed!

CHOOSE THE CORRECT HEAD-UNIT ADAPTER FROM THOSE BELOW


29-001 Alpine




29-002 Blaupunkt




29-003 Clarion

 


29-004 JVC

 


29-005 Kenwood  
Single wire

 


29-005D Kenwood  
4 pin DIN Plug

 


29-006 Panasonic  
Standard CD units

 


29-006A Panasonic  
AV head-units

 


29-009 Siemens  
VDO

 


29-008 Sony  
3v & 5v units

 

29-011 Zenec

 

29-020 Pioneer &  
Sony

 

Special external drive  
PCB version

CHOOSE THE CORRECT HEAD-UNIT ADAPTER FROM THOSE BELOW

 
29-001 Alpine



29-002 Blaupunkt




29-003 Clarion



29-004 JVC



 29-005 Kenwood  
Single wire



29-005D Kenwood  
4 pin DIN Plug



 
29-006 Panasonic  
Standard CD units



29-006A Panasonic  
AV head-units




29-009 Siemens  
VDO




29-008 Sony  
3v & 5v units



 29-011 Zenec



29-020 Pioneer &  
Sony

 

Special external drive  
PCB version