APPLICATIONS

Mazda RX-8 2009-2010

KIT FEATURES

- DIN Head Unit Provision with Pocket
- ISO DIN Head Unit Provision with Pocket
- DDIN Head Unit Provision
- ISO Stacked Head Unit Provision
- Painted to Match Factory Finishes



KIT COMPONENTS

- A) Radio Housing B) ISO Brackets C) ISO Trim Plate D) DDIN Brackets
- E) DDIN Trim Plate F) Pocket G) (5) Plastic Snaps

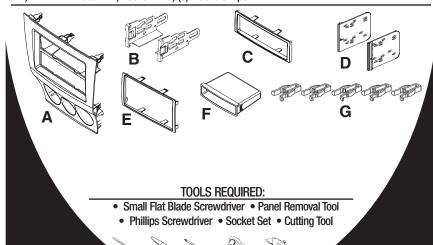


TABLE OF CONTENTS


<u> Dash Disassembly</u>	
Mazda RX-8 2009-2010	?
(it Preparation	3
<u>(it Assembly</u>	
DIN Head Unit Provision with Pocket	4
ISO DIN Head Unit Provision with Pocket	5
Double DIN / Stacked ISO DIN Head Unit Provision	6


DASH DISASSEMBLY


MAZDA RX-8 2009-2010


- Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2 Unscrew the shift knob counter clockwise to remove. (Figure A)
- 3 Unclip and remove the shifter trim panel. (Figure B)
- 4 Remove (2) Phillips screws from the bottom of the ashtray assembly then unclip and remove the assembly. (Figure C)
- 5 Remove (2) Phillips screws from the bottom of the radio/climate control panel. (Figure D)
- 6 Unclip and remove the knee panel on the driver's side under the steering column (Figure E) then remove (1) 10 MM bolt from the side of the radio bracket. (Figure F)

Continued on page 2.

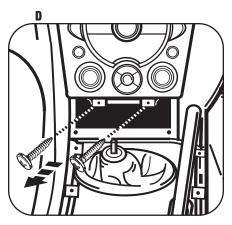

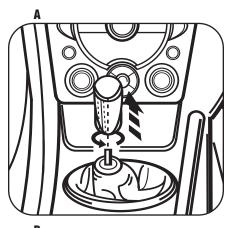

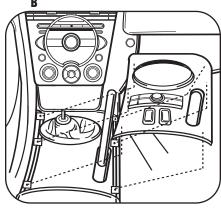

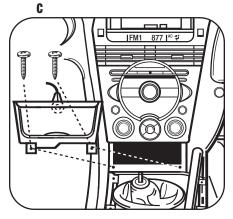



DASH DISASSEMBLY

MAZDA RX-8 2009-2010

- 7 Unsnap and remove the radio/climate control panel including radio chasis.
- 8 Remove climate controls from radio/climate control panel.

Continue to kit preparation.

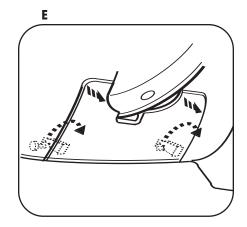

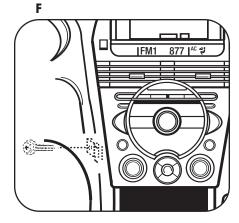



KIT PREPARATION

MAZDA RX-8 2009-2010

*Note: Refer also to the instructions included with the aftermarket radio.

- Mount the climate controls to the Radio Housing using the factory hardware. (Figure A)
- 2 Slide the five plastic clips provided in this kit to the legs located on the back of the radio housing.. (Figure B)

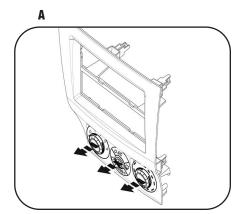

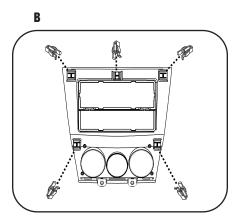

KIT ASSEMBLY

DIN HEAD UNIT PROVISION WITH POCKET

*Note: Refer also to the instructions included with the aftermarket radio.

1 Locate the factory wiring harness in the dash. Re-Connect the negative battery terminal and test the unit for proper operation.

Slide the DIN cage into the Radio
Housing and secure by bending the

2 metal locking tabs outward. (Figure A)


Snap the pocket into the bottom opening of the radio housing. (Figure B)


Slide the aftermarket head unit into the cage and secure. (Figure C)


Reassemble the dash in reverse order of disassembly.

5

Continue to final assembly.

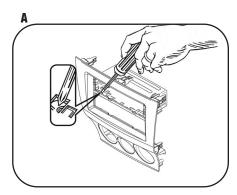

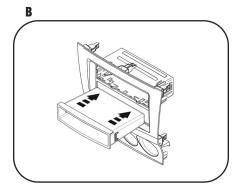

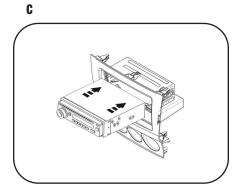

KIT ASSEMBLY

ISO DIN HEAD UNIT PROVISION WITH POCKET

1 Locate the factory wiring harness in the dash. Re-Connect the negative battery terminal and test the unit for proper operation.

Mount the ISO Brackets to the radio using the screws supplied with the **2** radio. (Figure A)

Snap the pocket into the bottom opening of the radio housing. (Figure B)

3

Slide the head unit into the radio open-ing until the side clips engage.


4 (Figure C)


Snap the Trim plate into the Radio Housing. (Figure C)


5

Reassemble dash in reverse order of disassembly.

6

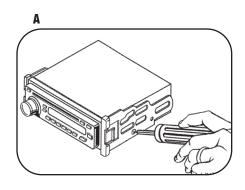

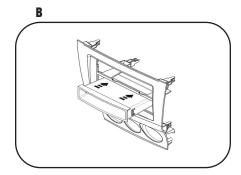

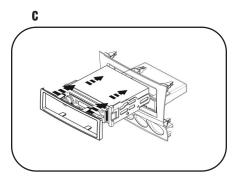

KIT ASSEMBLY

DOUBLE DIN / STACKED ISO DIN HEAD UNIT PROVISION

- 1 Locate the factory wiring harness in the dash. Re-Connect the negative battery terminal and test the unit for proper operation.
- 2 Cut and remove the center bar from the radio housing. (Figure A)
- 3 Snap the Double DIN brackets to the inside edge of the Radio Housing. (Figure B)
- 4 Slide the Double DIN head unit or stacked ISO head units into the bracket/radio housing assembly and secure the Double DIN head unit or stacked ISO head units to the assembly using the screws supplied with the radio.
- 5 Snap the double DIN trim plate into the radio housing. (Figure C)
- 6 Reassemble dash in reverse order of disassembly. (Figure C)

