

INSTALLATION INSTRUCTIONS

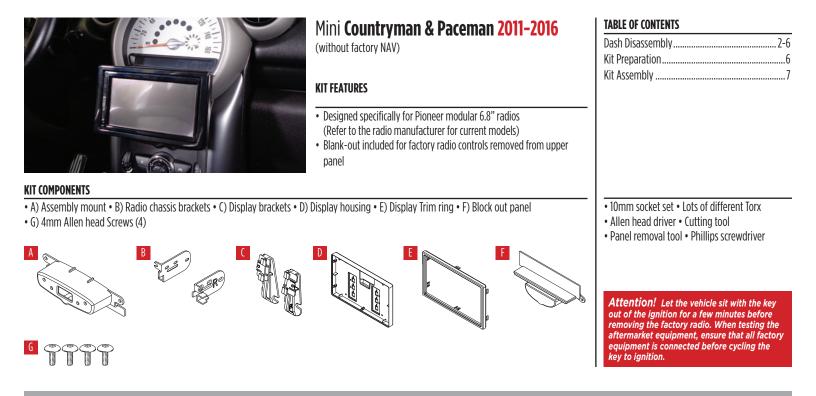


DASH DISASSEMBLY


- 1. Unclip and remove the trim panel to the right of the glove box above the kick panel. (Figure A)
- **2.** Unclip and remove the passenger side kick panel. (Figure B)
- Remove (2) Torx screws (facing up) from the panel below the glove box then unclip the front edge of the panel and let hang. (Figure C)

Continued on the next page

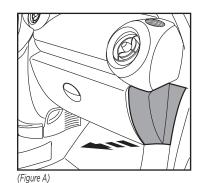

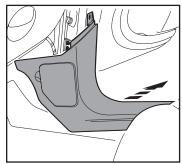


(Figure B)

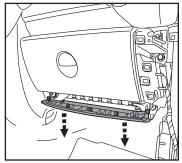


(Figure C)

4. Remove (7) Torx screws (2 on bottom, 3 on top edge with door open, and 2 from right side) securing the glove box then unclip and remove the glove box assembly. (Figures D, E)

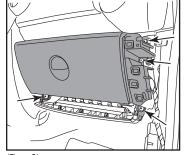


(Figure D)

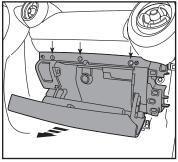


(Figure E)

- Unclip and remove the panel to the left of the driver's side knee bolster panel. (Figure F)
- 6. Remove (3) Torx screws securing the knee bolster panel then unclip and remove the panel. (Figure G)


Continued on the next page

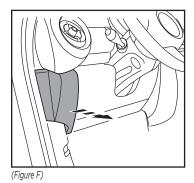

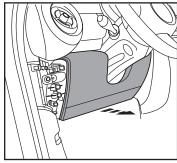


(Figure G)

- Pull the rubber cover in the center console back to reveal (1) Torx screw on shifter trim panel. (Figure H)
- 8. Remove (2) Torx screws from inside the cup holders and the (1) Torx screw exposed in step 7 then unclip and slide the shifter trim panel rearward (toward rear of vehicle). (Figure I)

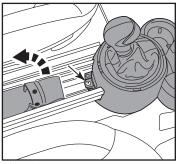


(Figure H)

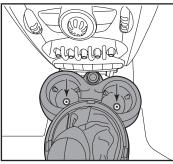


(Figure I)

- **9.** Remove (1) Torx screw from the trim panel in front of the shifter trim panel then unclip and remove the panel. (Figure J)
- **10.** Unclip and remove the side trim panels from the center stack panel. (Figure K)

Continued on the next page

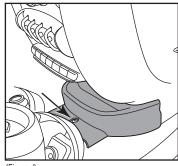




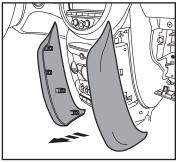


(Figure K)

- **11.** Unclip and remove the trim panel surrounding the speedometer and a/c vents. (Figure L)
- Remove (10) Torx screws from the center stack surrounding the a/c controls and window switches then unclip disconnect and remove the center stack. (Figure M)

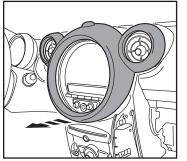


(Figure L)

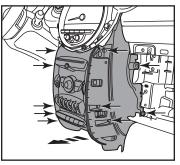


(Figure M)

- **13.** Remove (7) Torx screws securing the sub trim panel surrounding the speedometer and a/c vents then unclip and remove the panel. (Figure N)
- **14.** Remove (5) Torx screws securing the radio/speedometer assembly then disconnect and remove the entire assembly. (Figure 0)

Continued on the next page

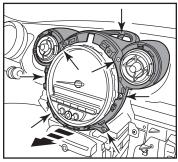


(Figure N)

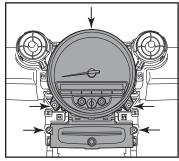


(Figure O)

15. Push the two clips in on the back of the speedometer and lift up carefully to separate the chassis and speedometer, then unplug the ribbon cable and set speedometer aside for reassembly. (Figures P,Q)

Continue to Kit Preparation

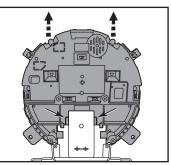



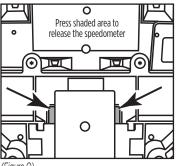





KIT PREPARATION

- **16.** Remove (4) Torx screws securing the radio controls, then remove the entire assembly from the speedometer. (Figure A)
- **17.** Secure the **block out panel** to the speedometer using (2) of the factory screws. (Figure B)

Continue to Kit Assembly

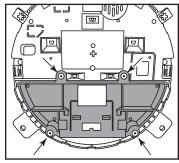

(Figure A)

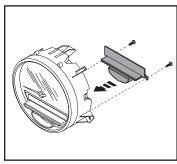

(Figure B)


KIT ASSEMBLY

 
Note: For steps 2 and 5, reference the installation manual provided with the radio for which hardware to use. The display screen and radio chassis use two different types of screws.

 Secure the display brackets to the assembly mount using (4) Allen head screws provided. (Figure A)


Note: The brackets have a locking pin on them which must face outwards.

- 2. Secure the **radio brackets** to the radio chassis using (4) screws supplied with the radio. (Figure B)
- Slide the radio chassis/bracket assembly into the dash. Secure the assembly mount/display bracket assembly to the radio brackets using the factory screws (Figure C)

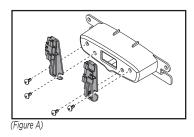




(Figure B)

 


(Figure C)

- **4.** Route the RGB display cable from the radio chassis, through the opening in the **assembly mount**.
- Secure the radio display to the display housing using (4) screws supplied with the radio. (Figure D)
- 6. Clip the **display trim ring** onto the assembly. (Figure E)
- Plug the RGB display cable into the display, then slide and lock in place the display housing to the display brackets. Use the (4) lower holes in the display housing (Figure F)

 
Note: The locking pins can be pulled back to release the display housing.



(Figure D)

 

(Figure E)

 

(Figure F)