



Steering Wheel Control Functions



Setting the Clock (Vehicles with and without Clock setting buttons)

- 1. To enter clock setting mode, press and hold the 'AUDIO SOURCE' button on the steering wheel until the time displayed on the dash shows '00:00'
- 2. After one second, the display will return back to normal. This indicates you are now in clock setting mode.
- 3. Use Vol + and Vol on the steering wheel to adjust the time. Vol + changes hours and Vol changes minutes.
- 4. Once the time has been set, if neither button is pushed within five seconds the display with show 00:00 for one second to indicate clock setting mode has been left.

Installation Guide

Part No: CTSVX005.2 Vauxhall Can-Bus Steering Wheel Control Interface



Setting the Clock (Vehicles with and without Clock setting buttons)

- 1. To enter clock setting mode, press and hold the 'AUDIO SOURCE' button on the steering wheel until the time displayed on the dash shows '00:00'
- 2. After one second, the display will return back to normal. This indicates you are now in clock setting mode.
- 3. Use Vol + and Vol on the steering wheel to adjust the time. Vol + changes hours and Vol changes minutes.
- 4. Once the time has been set, if neither button is pushed within five seconds the display with show 00:00 for one second to indicate clock setting mode has been left.