


Installation

1. Install the monitor or aftermarket head unit. To auto switch the monitor to reverse image, connect the reverse trigger wire to the 12v reverse light feed or if you are using a CANbus steering control adapter use the supplied reverse feed.
2. Fit the camera and join the yellow connectors as shown to the camera input cable on the new aftermarket head unit/ screen or monitor.
3. Connect one of the red wires to a 12V switched power supply that is ignition live - we recommend fitting via a 1 Amp fuse. This can be done at either end of the cable.
4. Connect the loose black wire to a secure chassis ground point.
5. The camera comes with parking lines disabled. To enable these, lift off the white and black jumper.

REVERSE GEAR INPUT

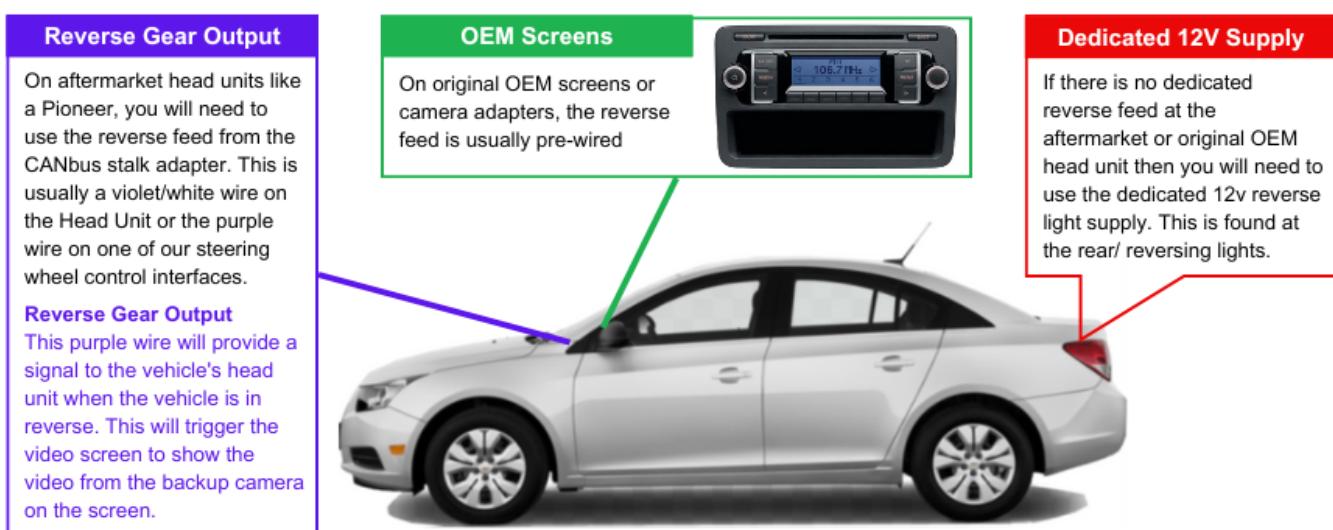

This is a guide to get the reverse image from the camera to the display

THIS IS NOT HOW TO POWER THE CAMERA