


Website: www.incartec.co.uk E-Mail: sales@incartec.co.uk

InCarTec FK-853-6 Install kit for Range Rover Sport with Harmon Kardon Logic 7

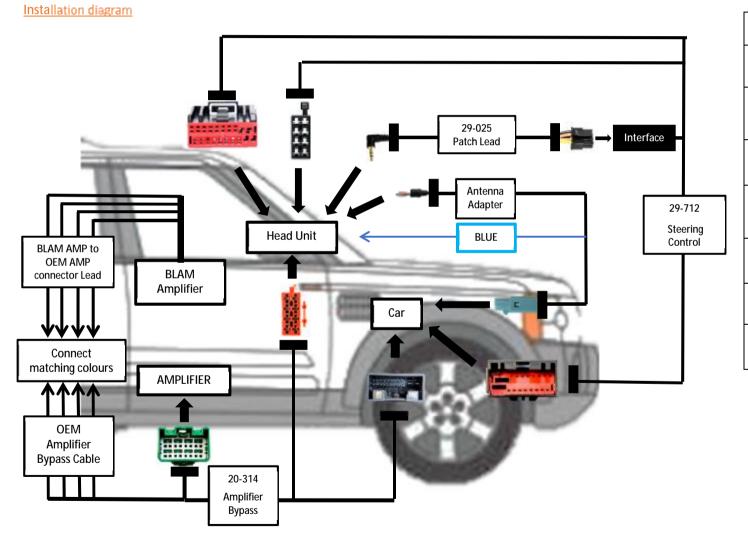

		Component List
Part Number	Component	Image
50-320	Fascia/Fitting Cage	
29-712	Steering Control Interface harness	
21-123	Antenna Adapter	7
MOST-CAB-100 (included in 29-712)	Fibre optic Extension Cable	1
20-314	Amplifier Bypass Cable	28
29-025	Universal Patch Lead	196
AK-LR-01 OPTIONAL EXTRA	BLAM Compact Amplifier	**************************************



Website: www.incartec.co.uk E-Mail: sales@incartec.co.uk

Installation Instructions

- 1. Ensure your vehicle's ignition if off with the key removed.
- 2. Remove the original Head Unit (radio) with reference to the manufacturer's instructions.
- 3. Relocate the OEM Head Unit using the fibre optic extension with reference to the 29-712 specific instructions.
- 4. Fit the new fitting cage into the car. You can discard any fitting cage that came with the new Head Unit you are fitting.
- 5. Assembly the Universal Patch Lead (29-025) with reference to the given instructions with the Patch Lead.
- Connect the patch lead to the Steering Control Interface (Black box of 29-712 harness). THIS MUST BE DONE FIRST BEFORE POWER IS SUPPLIED TO THE INTERFACE.
- 7. Connect the 27-712 between the Car and the new head-unit using Black power only ISO.
- 8. DO NOT USE THE BROWN SPEAKER CONNECTOR ON THE 29-712 as you will be using the Speaker connector from the Amplifier bypass lead 20-314
- 9. Connect the Antenna Adapter to the antenna lead removed from the original Head to the new Head Unit
- 10. Locate the Amplifier in the vehicle, this is under the driver's seat. Disconnect the green connector from the amplifier and connect the Amplifier bypass cable (20-314) . Run the Brown 8 way iso connector to the new head-unit.
- 11. The coloured wires on the bypass cable are for the sub-woofers. Add monoblock amplifier if required. (optional kit AK-LR-01).
- 12. Test the system fully before fitting the new Head Unit fully.

Troubleshooting

- Check that the correct patch lead has been used and links in the connector are in the correct place (Always disconnect from the power supply if
 you change the lead).
- Check that head-unit is earthed and the black wire is earth.