Iveco Daily CANbus steering control interface







 
The switches on the interface need to be set according to the brand of radio and vehicle model. Open the black box and set the switches.

See the tables below for the switch settings. Switches 1-4 relate to the brand of head unit and switched 5-8 relate to the model of car.

Switch	1	2	3	4
Alpine	Off	On	Off	Off
Kenwood	On	On	Off	Off
JVC	Off	Off	On	Off
Clarion	Off	On	On	Off
Zenec	Off	Off	Off	On
Sony	On	Off	On	On
Pioneer	Off	On	On	On
Chinese/learning	On	Off	Off	On

5	6	7	8	Car model
On	On	On	Off	Iveco Daily

## Set the switches



## Set up the patch lead



Pioneer and Sony

Pin 1 black (base)
Pin 2 red (middle)
Pin 3 not connected

Pin 3 not connected Pin 4 white (tip)

Alpine, Clarion and JVC

Pin 1 black (base)
Pin 2 white (tip)
Pin 3 not connected
Pin 4 red (middle)

4 3

JVC, Kenwood and Zenec

Pin 1 not connected
Pin 2 blue (single wire)
Pin 3 not connected

Pin 4 not connected

4 3

Chinese/Learning

Pin 1 blue (single wire) Pin 2 not connected Pin 3 not connected Pin 4 blue (single wire)

The 4 pin patch lead connector diagrams above are viewed from the wire entry side of the connector.

LED STATUS

1 Green
2 Yellow

Green—CAN active

Yellow- Ignition output active

When connected the green light will indicate that the interface is recognising the vehicles CANbus, and the yellow light will indicate the interface is giving out an ignition power supply.

If the green light is not on check the CANbus connections and switch settings.