
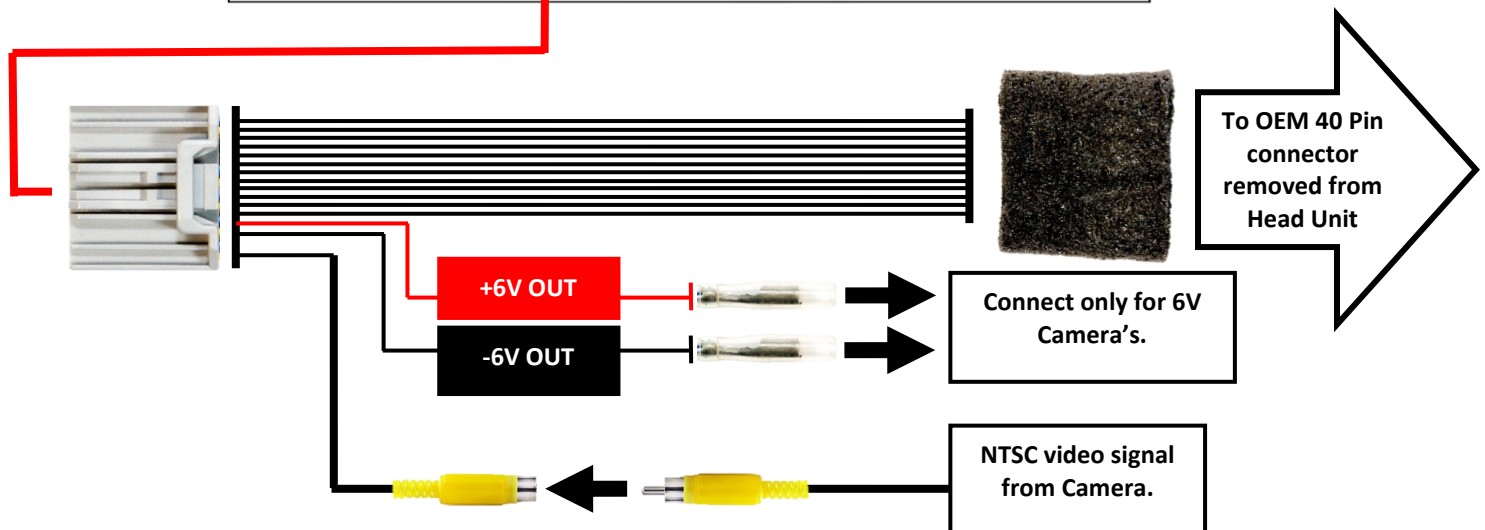


This cable allows you to connect rear view cameras in Toyota / Lexus cars with OEM multimedia system of 5th generation 5GEN. The cable offers Plug & Play installation of various aftermarket cameras without damaging the OEM wiring.

INSTALLATION DIAGRAM

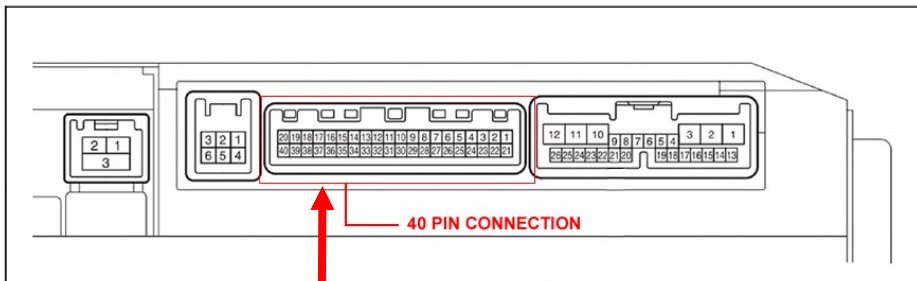

INSTALLATION INSTRUCTIONS

1. Ensure the vehicle's ignition is off and the key has been removed.
2. Remove the standard Head Unit with reference to the manufacturer's instructions.
3. Remove the standard 40-pin connector from the rear of the Head Unit and connect it to the female 40 pin connector of the 27-225 harness.
4. Connect the male 40-pin connector to the rear of the Head Unit with reference to the above diagram.
5. Only connect the red and black 6V wires if the camera being using needs an 6V power supply.
6. Test the camera fully before re-installing the head Unit


PLEASE NOTE: Power of the additional rear view camera should be taken from the ACC line (first key turn), otherwise the camera input will not be active. Please turn over sheet for further guidance

PLEASE NOTE

Power of the additional rear view camera should be taken from the ACC line (first key turn), otherwise the camera input will not be active. Depending on the type of camera (more specifically, on the voltage required for work) +6 V output voltage of the monitor may be used. If the camera requires more than +6 V it should be connected to the ACC line.

PLEASE NOTE

In some cases the head unit may not have a REVERSE wire. If that's the case, you need to extend the wire from the +12 V tailgate lamp as the cable will not work otherwise.

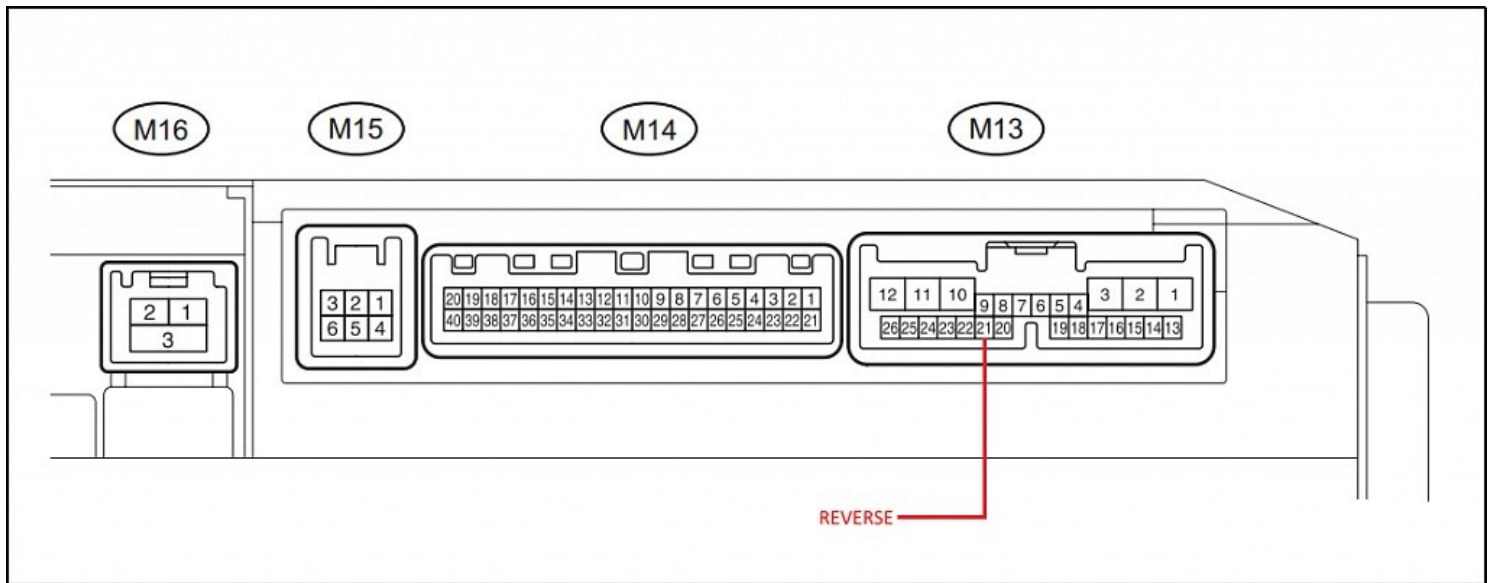

FREQUENTLY ASKED QUESTIONS

I have connected a rear view camera using a Plug & Play connection cable but image from the camera does not appear on the screen.

- Some cars need to have their rear view camera input additionally activated. This procedure can usually be done by a dealer or using diagnostics equipment or software. We usually clarify this in the product description.
- In most cases, camera should be powered up from the ACC line i.e. when powering on, the head unit should recognize the camera video signal. Otherwise, rear view camera input will not be active.
- In most cases, NTSC cameras should be used (which is clarified in the product description). Most cars do not recognize PAL rear view cameras.
- In some cars, all doors have to be closed for the rear view camera image to appear on the screen.

I have connected a Plug & Play camera/video connection cable; the connectors fit but image does not appear on the screen.

- Make sure your head unit is present in the compatibility table of the product description. Toyota Touch/Entune gen.1 and Toyota Touch 2/Entune gen.2 head units are easily confused. Although they may have the same connectors, image will not be shown while the car is moving or will not appear on the screen at all.