


Adjustment dials need to be set correctly during installation.  
Using a screwdriver, turn each channel up one at a time until  
you start to hear distortion.

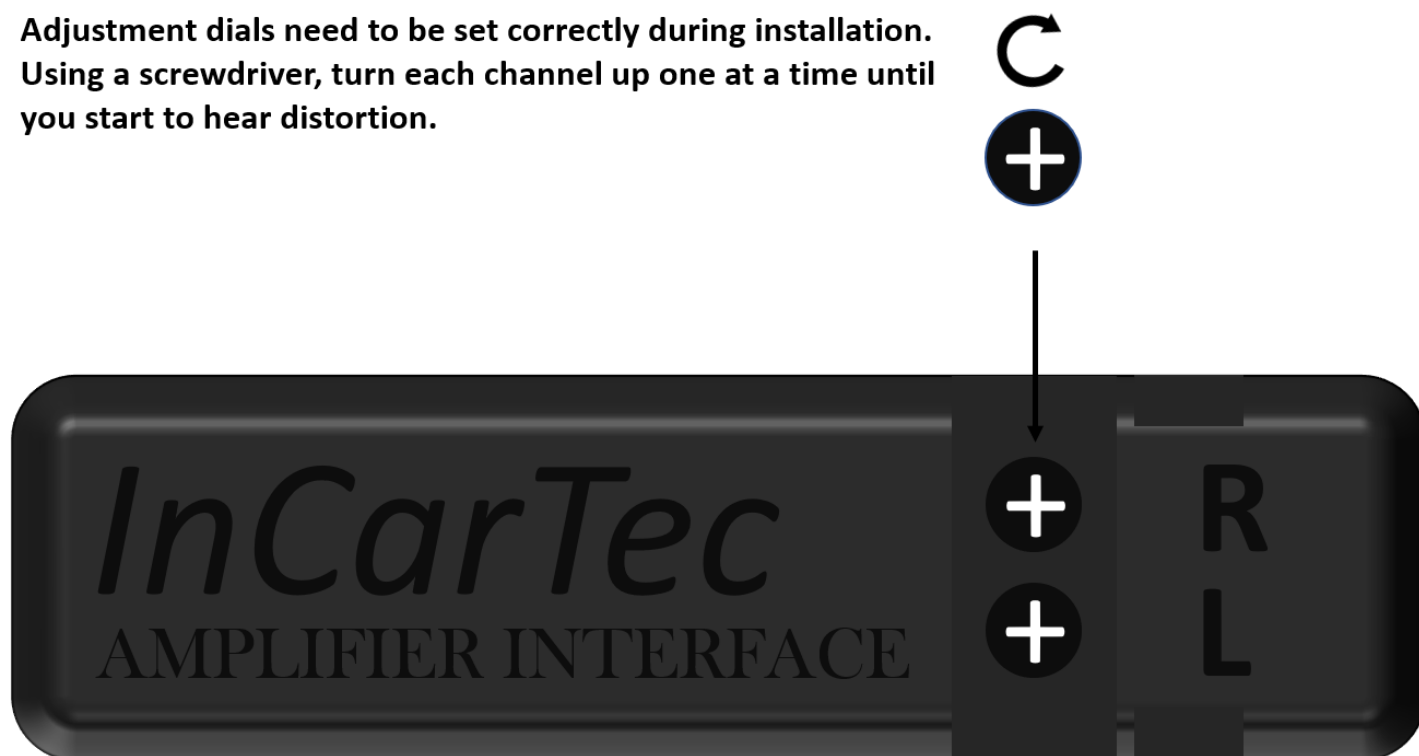

Adjustment dials need to be set correctly during installation.  
Using a screwdriver, turn each channel up one at a time until  
you start to hear distortion.

