

Video inserter 27-561 (RL4-RLINK2)

Compatible with Renault vehicles with R-LINK2 Infotainment and 7inch or 8.7 inch monitor



Video-inserter for front- and rear-view camera and two more video inputs

Product features

- Video-inserter for factory-infotainment systems
- 1 CVBS Input for rear-view camera
- 1 CVBS Input for front camera
- 2 CVBS Video-inputs for after-market Video sources (e.g. USB-Player, DVB-T Tuner)
- Automatic switching to rear-view camera input on engagement of the reverse gear
- Automatic front camera switching after reverse gear for 10 seconds
- Activatable parking guide lines for rear-view camera (not available for all vehicles)
- Video-in-motion (ONLY for connected video-sources)
- Video-inputs NTSC compatible



Contents

1. Prior to installation

1.1.	Delivery contents
1.2.	Checking the compatibility of vehicle and accessories
1.3.	Boxes and connectors – Video interface
1.4.	Settings of the 8 Dip switches (black)
1.4.1.	Activating the front camera (dip 1)
1.4.2.	Enabling the interface's video inputs (dips 2-3)
1.4.3.	Rear-view camera setting (dip 5)
1.4.4.	Monitor adjustments (dip 8)
1.5.	Settings of the 4 Dip switches (CAN function – red)

2. Installation

2.1.	Place of installation
2.2.	Connection schema
2.3.	Connection to the factory monitor
2.3.1	.7inch monitors with 8pin connector
2.3.2	.8,7inch monitors with 24pin connector
2.4.	Analog power supply for the video interface
2.5.	Power supply output
2.6.	Connecting the video-sources
2.6.1.	Audio insertion
2.6.2.	After-market front camera
2.6.3	.After-market rear-view camera
2.6.3.1.	Case 1: Interface receives the reverse gear signal
2.6.3.2.	Case 2: Interface does not receive the reverse gear signal
2.7.	Connecting video-interface and keypad
2.8.	Picture settings and guide lines

3. Interface operation

- By factory infotainment button 3.1.
- By external keypad 3.2.

4. Specifications

5. FAQ – Trouble Shooting-Interface functions

6. Technical support



Legal Information


By law, watching moving pictures while driving is prohibited, the driver must not be distracted. We do not accept any liability for material damage or personal injury resulting, directly or indirectly, from installation or operation of this product. Apart from using this product in an unmoved vehicle, it should only be used to display fixed menus or rear-view-camera video when the vehicle is moving (for example the MP3 menu for DVD upgrades).

Changes/updates of the vehicle's software can cause malfunctions of the interface. Up to one year after purchase we offer free software-updates for our interfaces. To receive a free update, the interface has to be sent in at own cost. Wages for de-and reinstallation and other expenditures involved with the software-updates will not be refunded.

1. Prior to installation

Read the manual prior to installation. Technical knowledge is necessary for installation. The place of installation must be free of moisture and away from heat sources.

1.1. Delivery contents

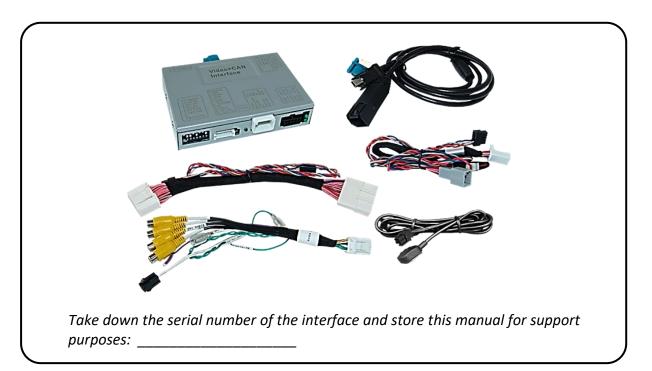



RL4-RLINK2




1.2. Checking the compatibility of vehicle and accessories

Brand	Compatible vehicles	Compatible systems		
Renault	Captur model year 2017-2019 Clio model year 2017-2019 Espace model year 2016-2019 Kadjar model year since 2016 Koleos model year since 2016 Master Megane model year 2016-2020 Scenic since about 10/2016 Talisman model year 2016-2020 and other vehicles with	R-Link2 with 7inch or 8.7inch monitor		
Limitations				
Video only	For inserting Audio signals eitl	The interface inserts ONLY video signals into the infotainment. For inserting Audio signals either the possibly existing factory audio-AUX-input or a FM-modulator can be used. If 2 audio sources shall be connected to the infotainment, an additional electronic is necessary to switch them.		
		the infotainment, an additional		
Factory rear-view co	electronic is necessary to swit amera Automatically switching-back view camera is only possible v	the infotainment, an additional		
Factory rear-view co	electronic is necessary to swit amera Automatically switching-back view camera is only possible v delay the switch-back an addit	the infotainment, an additional ch them. from inserted video to factory rear- while the reverse gear is engaged. To tional electronic part is required. , the former PDC graphics won't		
,	electronic is necessary to swit mmera Automatically switching-back view camera is only possible v delay the switch-back an addir With connecting the interface apply anymore. Acoustic signa	the infotainment, an additional ch them. from inserted video to factory rear- while the reverse gear is engaged. To tional electronic part is required. the former PDC graphics won't als will still be present. tically be switched for 10 seconds gear. A manually front camera		
Factory PDC	electronic is necessary to swit amera Automatically switching-back view camera is only possible v delay the switch-back an addir With connecting the interface apply anymore. Acoustic signal amera The front camera will automatafter disengaging the reverse	the infotainment, an additional ch them. from inserted video to factory rearwhile the reverse gear is engaged. To tional electronic part is required. If the former PDC graphics won't als will still be present. It tically be switched for 10 seconds gear. A manually front camera and keypad.		



1.3. Boxes and connectors- Video interface


The video-interface converts the video signals of connected after-market sources in a factory monitor compatible picture signal which is inserted in the factory monitor, by using separate trigger options. Further it reads the vehicle's digital signals out of the vehicle's CAN-bus and converts them for the video interface.

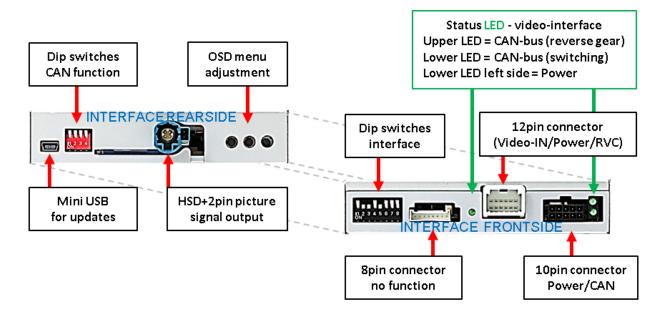



1.4. Settings of the 8 Dip switches (black)

 Some settings must be selected by the dip-switches on the video interface. Dip position down is ON and position up is OFF.



Dip	Function	ON (down)	OFF (up)
1	Front camera	enabled*	disabled
	Power supply output (red wire)	+12V (max. 3A) when reverse gear is engaged incl. 10 seconds delay and +12V by manual switching to front camera by keypad	+12V (max. 3A) ACC
2	Video 1-input	enabled	disabled
3	Video 2-input	enabled	disabled
4	No function		Set to OFF
5	Rear-view cam type	after-market	factory or none
6	No function		Set to OFF
7	No function		Set to OFF
8	Monitor size	8,7inch monitor	7inch monitor

After each Dip-switch-change a power-reset of the Can-box has to be performed!

See the following chapters for detailed information.

RL4-RLINK2

^{*}The front camera will automatically be switched for 10 seconds after disengaging the reverse gear.

1.4.1. Activating the front camera (dip 1)

If set to ON, the interface switches for 10 seconds from the rear-view camera to the front camera input after having disengaged the reverse gear. In addition, a manual switch-over to the front camera input is possible via keypad (short press) from any image mode.

Description of the power supply output: see chapter "Power supply output".

1.4.2. Enabling the interface's video inputs (dips 2-3)

Only the enabled video inputs can be accessed by switching through the interface's video sources. It is recommended to enable only the required inputs. So the disabled inputs will be skipped while switching through the video interfaces inputs.

1.4.3. Rear-view camera setting (dip 5)

If set to OFF, the interface switches to factory L picture while the reverse gear is engaged to display factory rear-view camera.

If set to ON, the interface switches to its rear-view camera input "Camera-IN" while the reverse gear is engaged.

Note: Dip4, 6 and 7 are out of function and have to be set to **OFF**.

1.4.4. Monitor adjustments (dip 8)

Dip switch 8 changes the monitor adjustments. For the 7inch 16:9 monitor the dip switch setting has to be OFF and for the 8,7inch 9:16 monitor the dip switch setting has to be ON.

Size of monitor	Dip 8
7inch 16:9	OFF
8,7inch 9:16 vertical	ON

1.5. Settings of the 4 Dip switches (CAN functions – red)

All 4 dip-switches of the video interface for LiNK2 infotainments have to be set to OFF.



Note: Dip position down is ON and position up is OFF.

vehicle/infotainment	Dip 1	Dip 2	Dip 3	Dip 4
Alle Fahrzeuge	OFF	OFF	OFF	OFF

After each Dip-switch-change, a power-reset of the Can-box has to be performed!



2. Installation

To install the interface, first switch off the ignition and disconnect the vehicle's battery. Please read the owner's manual of the car, regarding the battery's disconnection! If required, enable the car's Sleep-mode (hibernation mode)

In case the sleep-mode does not succeed, the disconnection of the battery can be done with a resistor lead.

As with any installation of retrofit equipment, a stand-by test is neccessary after the installation of the video interface, to ensure that the unit also switches off after reaching the vehicle's sleep mode.

Before the final installation, we recommend a test-run of the interface. Due to changes in the production of the vehicle manufacturer, there's always the possibility of incompatibility.


Before a final installation, we recommend a test-run to ensure the compatibility of the vehicle and the interface. Due to changes in the production of the vehicle manufacturer there's always a possibility of incompatibility.

2.1. Place of installation

The video interface is performed to be connected behind the vehicle's monitor.





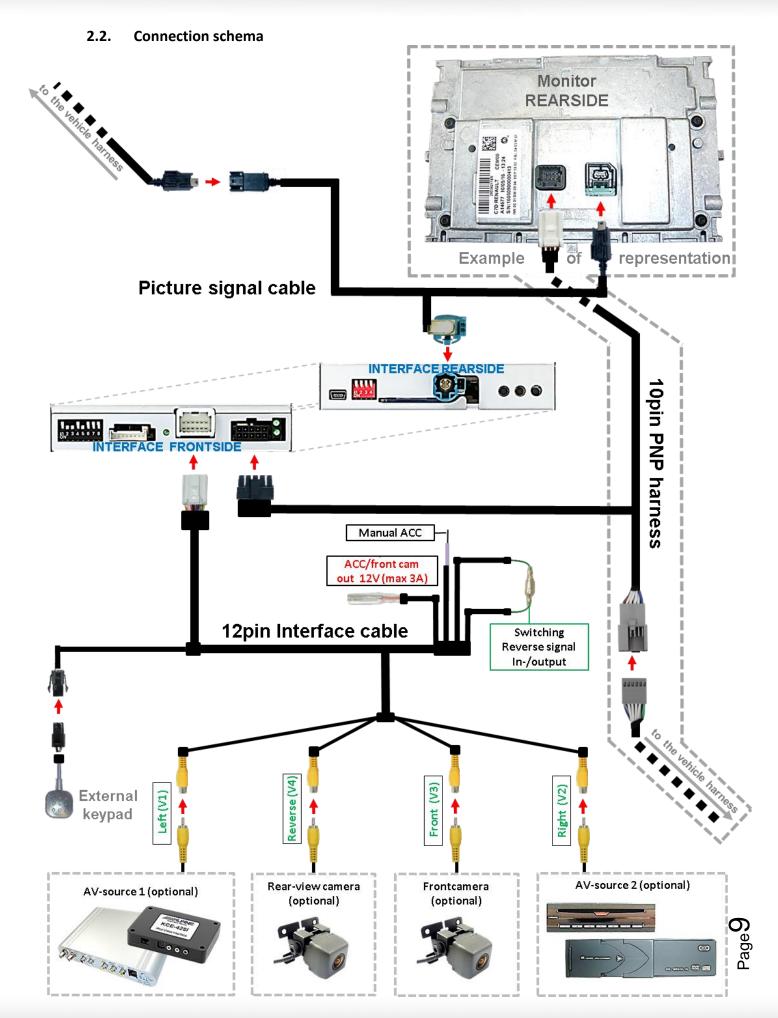




2.3. Connections to the factory monitor

Note: 2 different harnesses for 7" (8pin) and 8,7" (24pin) enclosed!

2.3.1. 7inch monitors with 8pin connection

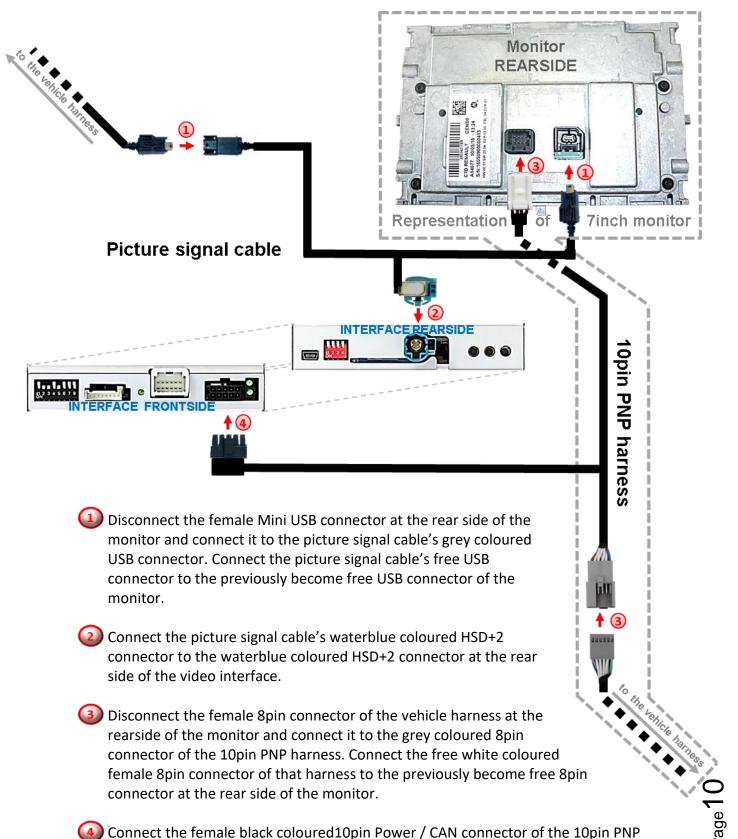


Version 11.04.2023 HW: CAM (V99)(V50+V41) RL4-RLINK2

harness to the 10pin connector at the front side of the video interface.



2.3.2. 8,7inch monitors with 24pin connection

For vehicles with 8,7inch monitor and 24pin connection, the included 24pin PNP harness has to be used instead of the 10pin PNP harness.

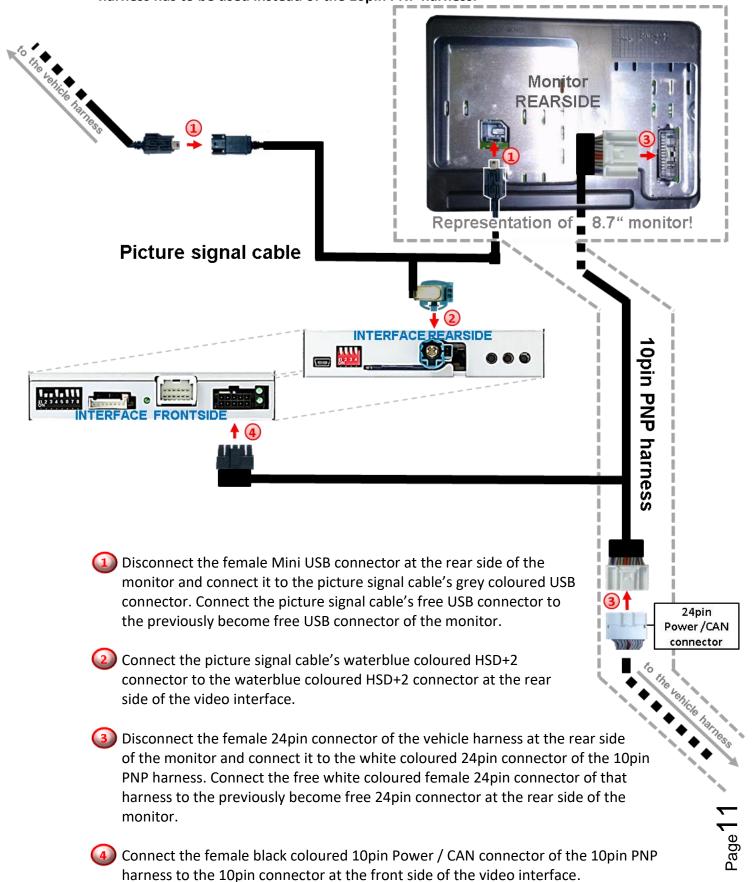

Version 11.04.2023 HW: CAM (V99)(V50+V41) RL4-RLINK2




Check 1

Exceptionally, the CAN communication may not succeed in all vehicles! If, after connecting the PNP harness, no interface LED lightens up while the ignition is turned on, additionally the analog power supply needs to be done! (see following chapter)

Check 2

Exceptionally, the power supply to the video interfaces may not be interupted after switching to the vehicle's sleep mode. If the interface LEDs continue to shine even in the vehicle's sleep mode, please contact the support!

2.4. Analog power supply for the video interface

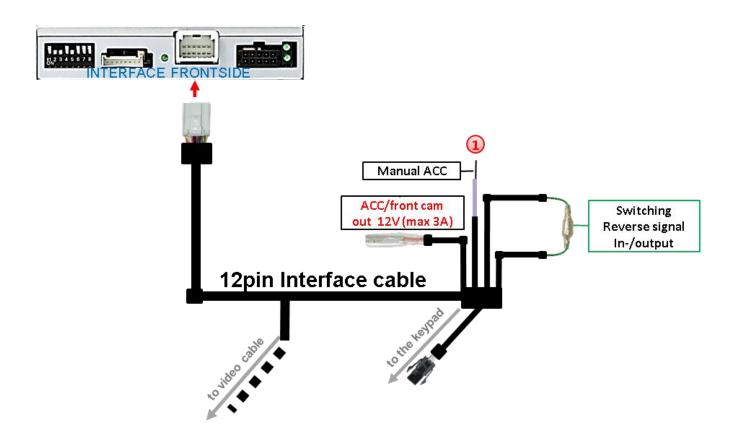


If, after connecting the PNP harness, no interface LED lightens up while the ignition is turned on, the single purple coloured wire Manual ACC of the 12pin interface cable has to be connected additionately to S-contact terminal 86s +12V (e.g. glove compartment illumination).

RL4-RLINK2



2.5. Power supply output

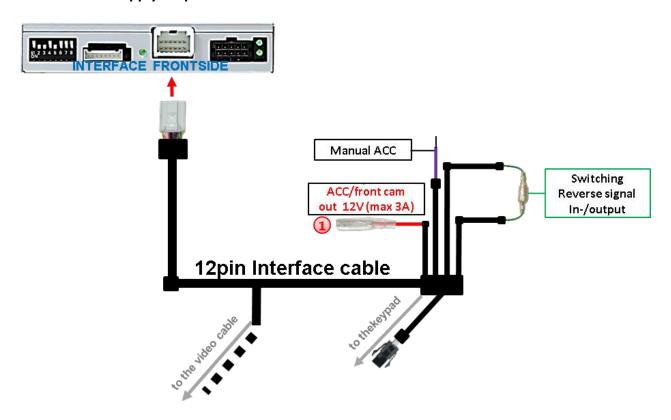


1 The red power supply output ACC/front cam out 12V (max 3A) can be used to power an external source and has a different assignment depending on the position of dip switch 1 (of the black 8 dips):

Dip	Function
Dip 1 ON	+12V (max. 3A) when reverse gear is engaged incl. 10 seconds delay after reverse gear is disengaged and +12V by manual switching to front camera by keypad (short press)
Dip 1 OFF	+12V (max. 3A) ACC

2.6. Connecting video sources

It is possible to connect an after-market rear-view camera, an after-market front camera and two more video sources to the video-interface.

Before the final installation, we recommend a test-run of the interface. Due to changes in production of the vehicle manufacturer, there's always the possibility of incompatibility.

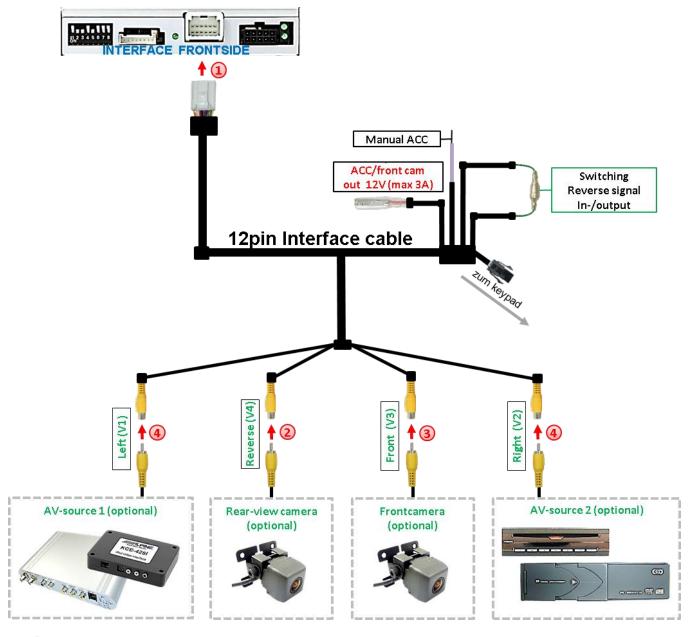


- Connect the 12pin interface cable's female 12pin connector to the male 12pin connector of the video-interface.
- 2 Connect the video RCA of the Rear-view camera to the 12pin interface cable's female RCA connector "Reverse V4.
- 3 Connect the front camera's video RCA connector to the 12pin interface cable's female RCA connector "Front V3".
- Connect the video RCA of the AV source 1 and 2 to the 12pin interface cable's female RCA connector "Left (V1)" and "Right (V2)".



2.6.1. Audio-insertion

This interface is only able to insert video signals into the factory infotainment. If an AV-source is connected, the audio insertion has to be done by the factory audio AUX input or an FM-modulator. The inserted video-signal can be activated simultaneously to each audio-mode of the factory infotainment. If 2 AV sources shall be connected to the infotainment, additional electronic is necessary to switch the audio signals.

2.6.2. After-market front camera

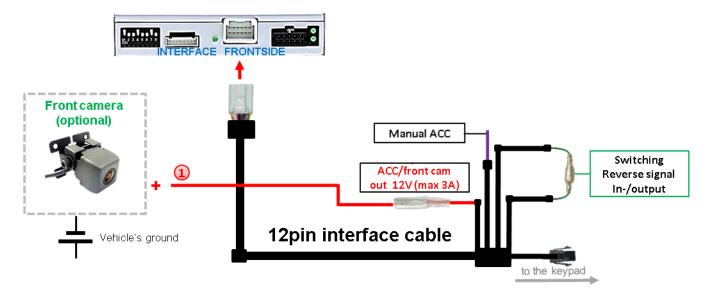

The red power supply output ACC/front cam out 12V (max 3A) can be used to power a front camera. If Dip 1 of the black 8 dips is set to ON, the power supply output gives +12V (max 3A) when reverse gear is engaged incl. 10 seconds delay after reverse gear is disengaged.

Note: In addition, a manual switch-over to the front camera input is possible via keypad (short press) from any image mode. The power supply output gives +12V then, too (if Dip 1 is set to ON and the front camera input is selected).

Attention: A long press of the external keypad push button will switch the interface to the next source.

Page 15




2.6.3. After-market rear-view camera

Some vehicles have a different reverse gear code on the CAN-bus which the video-interface is not compatible with. Therefore, there are two different ways of installation. If the video interface receives a signal of the reverse gear, the green wire "Reverse-OUT" of the 20pin cable should carry +12V while the reverse gear is engaged.

Note: Do not forget to set video interface's dip5 to ON before testing.

2.6.3.1. Case 1: Interface receives the reverse gear signal

If the CAN-bus interface receives +12V on the green wire of the 20pin cable when reverse gear is engaged, it will automatically be switched to the rear-view camera input "Camera IN" while reverse gear is engaged.

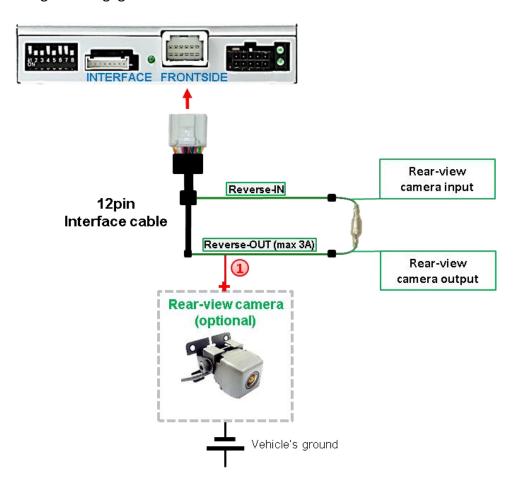


The 12 V power supply for the rear-view camera (max 3A) has to be taken from the green wire of the 12pin interface cable to avoid an unnecessary, permanent power supply to the camera electronic.

For the operation, both green cables "Reverse IN" and "Reverse OUT" have to remain connected.

²ade 16

2.6.3.2. Case 2: Interface does not receive the reverse gear signal

If the video interface does <u>not</u> deliver +12V on the green wire of the 20pin cable when reverse gear is engaged (not all vehicles are compatible), an external switching signal from the reverse gear light is required. As the reverse gear light's power supply isn't voltage-stable all the time, an ordinary open relay (e.g AC-RW-1230 with wiring AC-RS5) or filter (e.g. AC-PNF-RVC) is required. The diagram below shows the connection type of the relay.

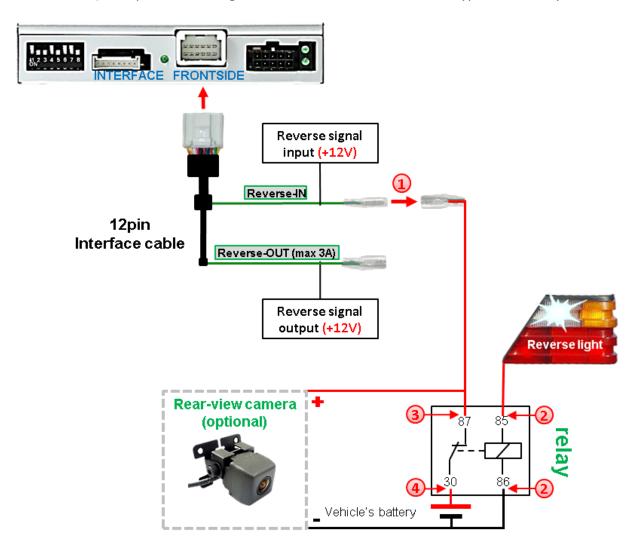


① Disconnect the green cable's preconnected male- and female connectors of the 12pin interface cable and connect the green input cable "Reverse-IN" to the output connector (87) of the relay.

Note: Not least to avoid short circuits, the best solution should be, to crimp a male 4mm connector to the relay's output cable and connect it to the green cable's female 4mm connector. The output-cable "Reverse-OUT" remains disconnected as it's out of function.

- 2 Connect the Reverse light's power-cable to coil (85) and the vehicle's ground to coil (86) of the relay.
- (3) Connect the output connector (87) of the relay to the rear-view camera's power-cable, like you did it with the green "Reverse-IN" cable before.
- 4 Connect permanent power / 12V to the relay's input connector (30).



2.7. Connecting video-interface and keypad

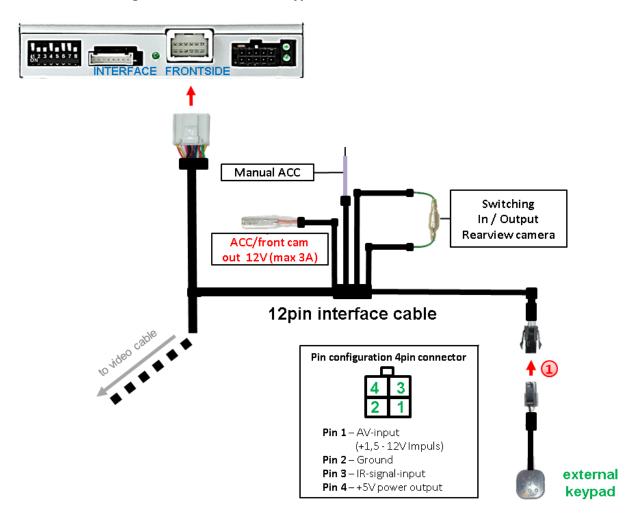


1 Connect the female 4pin connector of the keypad to the male 4pin connector of the 20pin interface cable.

Note: Regardless if it'll be used or not, the external keypad should always be connected! In case of non-using, it should be invisibly hidden together with the video interface.

Page **18**

2.8. picture settings and guide lines

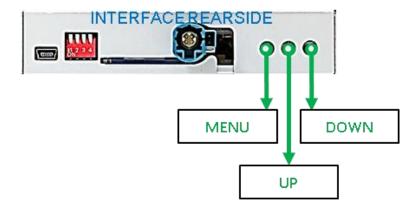


The picture settings are adjustable by the 3 push-buttons on the video-interface. Press the MENU button to open the OSD settings menu or to switch to the next menu item. Press UP and DOWN to change the selected value. The buttons are placed inside in the housing to avoid accidental changes during or after the installation. Picture settings must be done separately for Video1 and Video2 while the corresponding input is selected and visible on the monitor.

Note: The OSD menu is only shown when a working video source is connected to the selected video-input of the interface.

The following settings are available:

Contrast
Brightness
Saturation
Position H (horizontal)
Position V (vertical)
IR-AV1/2 (no function)
Guide L/R (no function)
UI-CNTRL (guide lines-RVC)
H-SIZE (horizontal picture size)
V-SIZE (vertical picture size)

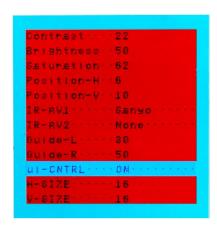

Note: If there is no communication between the CAN box and the vehicle's CAN-bus (several vehicles aren't compatible), the .reverse gear guide-lines can't be shown during the vehicle's operation, even if they once appear after having switched the system to powerless!



3. Interface operation

3.1. By factory infotainment button

 


Pressing the "LIST" button switches the input from the factory video to the inserted video sources. If all inputs are activated by dip switch settings, the order is the following:

Factory video \rightarrow Video IN 1 \rightarrow Video IN 2 \rightarrow factory video

Each press will switch to the next enabled input. Inputs which are not enabled will be skipped.

Switchover by vehicle buttons isn't possible in all vehicles. In some vehicles the external keypad has to be used.



3.2. By external keypad

Alternatively or additionally to the factory infotainment buttons, the interface's external keypad can be used to switch the enabled inputs. Even if not needed, the keypad should always remain connected to the video interface for support purposes.

Long press of keypad (2-3 seconds)

By long pressing the external keypad (2-3 seconds), the video interfaces witches the input from the factory video to the inserted video sources. Each long press will switch to the next enabled input. Inputs which are not enabled will be skipped.

Note: The interface switches after releasing the switch (after long pressure).

Short press of keypad (only if DIP 1 is set to ON)

By short pressing the external keypad, the video interfaces witches from the factory video to the front camera input and back to factory video.

4. Specifications

BATT/ACC range 7V - 25V Stand-by power drain 2mA

Power 280mA @12V Video input 0.7V - 1V Video input formats NTSC Temperature range -40°C to +85°C

Dimensions video-box 115 x 24 x 103 mm (W x H x D)



5. FAQ – Trouble shooting Interface functions

For any troubles which may occur, check the following table for a solution before requesting support from your vendor.

Symptom	Reason	Possible solution
., ,	Not all connectors have been reconnected to factory head-unit or monitor after installation.	Connect missing connectors.
No picture/black	No power on CAN-bus box (all LED CAN-bus box are off).	Check power supply of CAN-bus box. Check CAN-bus connection of CAN-bus box.
picture (factory picture).	CAN-bus box connected to CAN-bus in wrong place.	Refer to the manual where to connected to the CAN- bus. If not mentioned, try another place to connect to the CAN-bus.
	No power on video-interface (all LED video-interface are off).	Check whether CAN-bus box delivers +12V ACC on red wire output of 8pin to 6pin cable. If not cut wire and supply ACC +12V directly to video-interface.
	No picture from video source.	Check on other monitor whether video source is OK.
No picture/black	No video-source connected to the selected interface input.	Check settings dips 1 to 3 of video interface which inputs are activated and switch to corresponding input(s).
picture/white picture (inserted picture) but factory picture is OK.	LVDS cables plugged in wrong place.	Double-check whether order of LVDS cables is exactly connected according to manual. Plugging into head-unit does not work when the manual says to plug into monitor and vice versa.
Inserted picture totally wrong size or position. Inserted picture double or 4 times on monitor.	Wrong monitor settings of video-interface.	Try different combinations of dips 7 and 8 of video-interface. Unplug 6pin power after each change.
Inserted picture	Video sources output set to AUTO or MULTI which causes a conflict with the interfaces auto detection.	Set video source output fixed to PAL or NTSC. It is best to set all video sources to the same standard.
distorted, flickering or running vertically.	If error occurs only after source switching: Connected sources are not set to the same TV standard.	Set all video sources to the same standard.
	Some interfaces can only	Check manual whether there is a limitation to NTSC
Inserted picture b/w.	handle NTSC input.	mentioned. If yes, set source fixed to NTSC output.
Inserted picture qual. bad.		
Inserted picture size slightly wrong. Inserted picture position wrong.	Picture settings have not been adjusted.	Use the 3 buttons and the interface's OSD to adjust the picture settings for the corresponding video input.
Camera input picture flickers.	Camera is being tested under fluorescent light which shines directly into the camera.	Test camera under natural light outside the garage.
Camera input picture is bluish.	Protection sticker not removed from camera lens.	Remove protection sticker from lens.



Symptom	Reason	Possible solution
Camera input picture black.	Camera power taken directly	Use relay or electronics to "clean" reverse gear lamp power. Alternatively, if CAN-bus box is compatible
Camera input picture has distortion.	from reverse gear lamp.	with the vehicle, camera power can be taken from green wire of 6pin to 8pin cable.
Camera input picture settings cannot be adjusted.	Camera input picture settings can only be adjusted in AV2 mode.	Set dip 3 of video-interface to ON (if not input AV2 is not already activated) and connect the camera to AV2. Switch to AV2 and adjust settings. Reconnect camera to camera input and deactivate AV2 if not used for other source.
Graphics of a car in camera input picture.	Function PDC is ON in the interface OSD.	In compatible vehicles, the graphics will display the factory PDC distance. If not working or not wanted, set interface OSD menu item UI-CNTRL to ALLOFF.
Chinese signs in camera input picture	Function RET or ALL is ON (function for Asian market) in the interface OSD.	Set interface OSD menu item UI-CNTRL to ALLOFF or PDCON.
Not possible to switch video sources by OEM	CAN-bus interface does not support this function for vehicle.	Use external keypad or cut white wire of 6pin to 8pin cable and apply +12V impulses for AV-switching.
button. Not possible to switch	Pressed too short.	For video source switching a longer press of about 2.5 seconds is required.
video sources by external keypad.	SW-version of interface does not support external keypad.	Use OEM-button or cut white wire of 6pin to 8pin cable and apply +12V impulses for AV-switching.
Interface does not switch to camera input when reverse gear is engaged.	CAN-bus interface does not support this function for the vehicles.	Cut the green wire of the 6pin to 8pin cable and apply +12V constant from reverse gear-lamp signal. Use relay to "clean" R-gear lamp power.
Interface switches video-sources by itself.	CAN-bus interface compatibility to vehicle is limited.	Cut the grey wire of 6pin to 8pin and isolate both ends. If problem still occurs, additionally cut the white wire of 6pin to 8pin cable and isolate both ends.



10R-03 5384

Made in China



