

APPLICATION

Note: Application data is subject to change at any time

Jeep Renegade (Limited)

2015 - UP

Please Note: this is for amplified vehicles only.

IN ISO CONNECTOR

Yellow Permanent 12V **Purple** Right Rear Speaker + Black Ground Purple/Black Right Rear Speaker -Red Ignition 12V Green Left Rear Speaker + Illumination Green/Black Left Rear Speaker -Orange

Grey Right Front Speaker +
Grey/Black Right Front Speaker White Left Front Speaker +
White/Black Left Front Speaker -

ADDITIONAL CONNECTIONS

Pink Speed Pulse
Green Park Brake Yellow RCA Reverse Camera

Purple/White Reverse Gear

INTERFACE CONNECTIONS

Reverse Camera Extension Harness Input


Power Harness Input

(3) Head Unit Connection (Patch) Lead Input

DIP Switch 1 - 'ON' for Pioneer, 'OFF' for other brand head units
DIP Switch 2 - 'ON' for PAL reversing camera, 'OFF' for NTSC reversing camera (Default is 'OFF'/NTSC)
DIP Switch 3 - Change from 'OFF' to 'ON' and back to reset screen settings to factory defaults.


Note: During this procedure, the screen background will change to red and no settings adjustments can be made.
DIP Switch 4 - Not Used

(5) Not Used

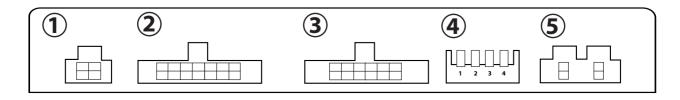



STEERING WHEEL CONTROL FUNCTIONALITY

The following diagram, though based on careful research, is an example only. Individual steering wheel control configurations may differ.

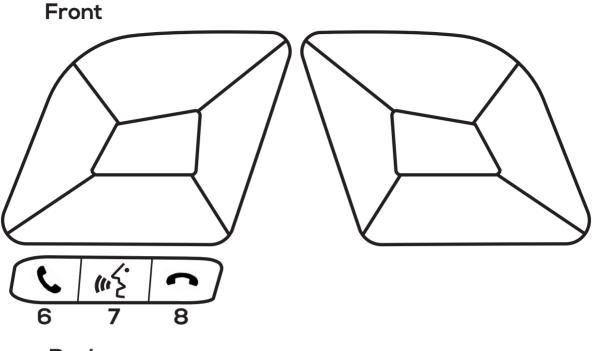

Back

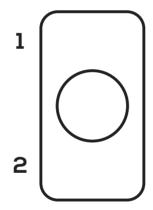

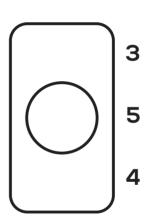


In Normal Mode

- 1. Track Up
- 2. Track Down
- 3. Volume Up
- 4. Volume Down
- 5. Source
- 6. Pick Up
- 7. Speech (Activates Speech or Mute radio dependant)
 Long Press: Enter Infodapter Menu
- 8. Hang Up

In Infodapter Mode

- 1. Navigate options up
- 2. Navigate options down
- 7. Short Press: Select Menu Item Long Press: Exit Infodapter Menu

WIRING DIAGRAM

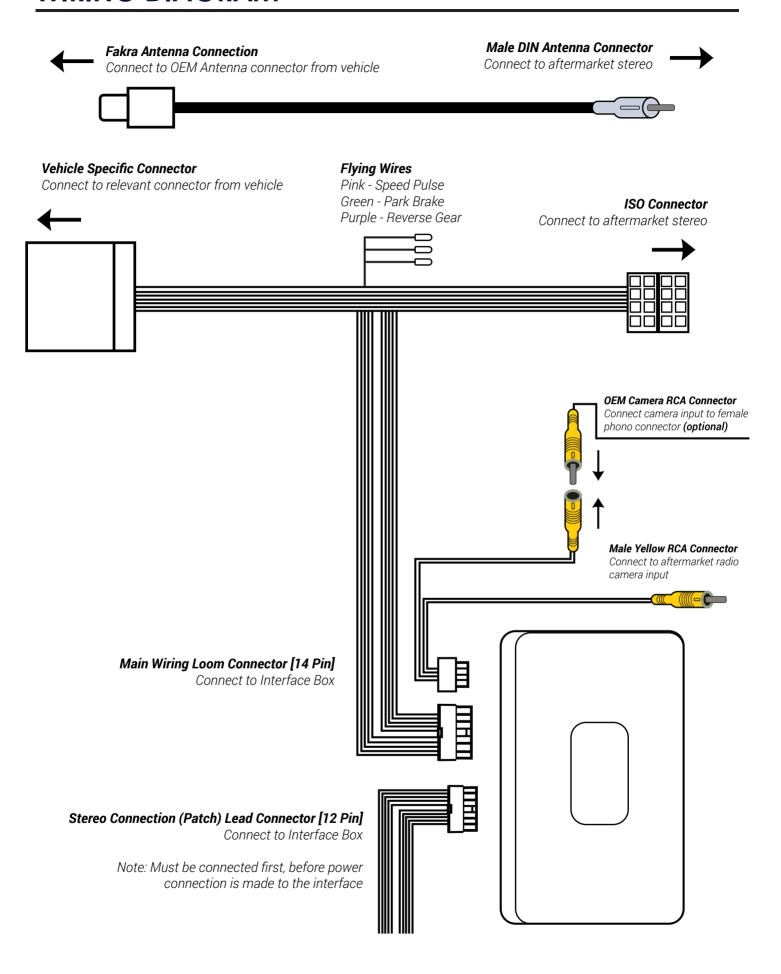

INSTALLATION GUIDE - WIRING

Before installing the interface, the factory stereo must be removed and disconnected. To do this, please consult the vehicle owner's manual/handbook or contact a fitting professional.

For universal patch leads, prepare the wiring loops in accordance with the instruction manual supplied before installation.

- 1. Connect the 12 Pin connector from the stereo connection (patch) lead to the interface box.
- 2. Connect the opposite end of the stereo connection (patch) lead to the steering wheel control input on the back of the aftermarket stereo.

NOTE: This may be a 3.5mm jack connector or a wired input depending on the brand of aftermarket stereo being fitted. Please consult the aftermarket stereo installation manual for further information on where to make the connection.

- IMPORTANT: THIS STEP MUST BE COMPLETED BEFORE CONNECTING POWER TO THE INTERFACE.

 FAILURE TO DO SO MAY RESULT IN A LACK OF FUNCTIONALITY AND THE NEED TO REINSTALL THE PRODUCT
- 3. Connect the 14 Pin connector from the supplied wiring loom to the interface box.
- 4. Connect the power/speaker ISO connector to the power/speaker ISO connector at the rear of aftermarket stereo.
- 5. Connect any additional flying wires from the harness to the head unit as required.

Note: Additional 'flying' wires can be connected to the vehicle to support various features i.e. parking brake trigger, reverse gear and speed pulse. Details of these can be found under 'Additional Connections'.

- 6. Connect 4 Pin camera extension harness to the interface box.
- 7. Connect the male Yellow RCA from the camera extension harness to the reverse camera input of the aftermarket head unit.
- 8. If fitting an aftermarket reverse camera, connect the cameras RCA to the female Yellow RCA connector on the extension lead.

If you are retaining the OEM reverse camera, connect the RCA on the harness to the female Yellow RCA connector on the extension lead.

- 9. Connect the vehicle specific connector on the supplied harness to the OEM connector from the vehicle.
- 10. Connect the vehicle specific antenna supplied between the OEM connector from the vehicle and the rear of the new stereo.
- 11. Test stereo and steering wheel control functionality for correct operation before reassembling the vehicle dashboard. If steering wheel control functions are unresponsive, please uninstall the interface and wiring and reinstall carefully in accordance with the above steps.

ACCESSING CONFIGURATION MENU

Once the CTKJP02 has been installed into the vehicle successfully, simply hold the 'Speech' button (*Fig.7*) on the steering wheel to access the 'Configuration Menu'.

The Infodapters 'Configuration menu' showcases a series of options and settings that can be altered to tailor the users experience. To navigate these options, use the 'Track Up' & 'Track Down' buttons (Fig.1 & 2).

Configuration Menu

Vehicle Settings Infodapter Settings Language Version < Back

VEHICLE SETTINGS

The Infodapter interface retains the ability to adjust vehicle settings that were present when the original head unit was installed.

The 'Vehicle Settings' menu contains a variety of original vehicle settings. Vehicle setup options that were available with through the original head unit will now be available through the aftermarket head unit.

See the vehicle handbook for more information regarding these features.

Vehicle Settings

Display
Clock
Doors & Locks
Lights
Safety & Driving Assistance
Vehicle Off Options
< Back

ACCESSING CONFIGURATION MENU

INFODAPTER SETTINGS

The 'Infodapter Settings' menu contains parameters that can be selected to enhance/adapt the Infodapters layout and functionality.

SCREEN SIZE/POSITION

Allows the user to setup the Infodapter display screen to the exact size of the aftermarket head unit being fitted.

PICTURE SETTINGS

Allows the user to adjust the Brightness, Contrast and Saturation levels of the Infodapter menus/parking graphics.

Infodapter Settings

Screen Size & Position
Picture Settings
Preferences
< Back

PREFERENCES

Camera Connected

Select 'Yes' if an optional camera is connected

Reverse Priority

Select which image (Camera or Park Assist) will be shown by default when reversing.

(Note: this option is only available when Camera Connected is set to 'Yes')

Infodapter Settings

Camera Connected Yes
Reverse Priority Park Assist
Park Assist Version 0
Park Brake Source Speed
Restore factory settings >
< Back

Park Assist Version

Select according to the colour configuration of the park assist fitted to the vehicle.

Park Brake Source

Set Park Brake output to activate when park brake is on (Brake), when speed is less than 3km/h (Speed) or to remain on at all times (Always On)

Restore Factory Settings

Select Yes to return all Infodapter settings to factory defaults

LANGUAGE & VERSION

The latter of the settings menu gives the user a selection of languages - English/French/German/etc. - as well as the ability of viewing the current version history.

Language	
English	⊚Deutsch
⊚Nederlands	⊚Italiano
⊚Français	⊚Español
⊚Swedish	⊚Brasileiro
⊚Greek	⊚Hungarian
⊚Polski	⊚Português
⊚Russian	⊚Türkçe
	<u>-</u>