

Product Overview

The 10-148Y-2.5 is a 2.5-meter Yellow Mini ISO extension lead for Renault vehicles fitted with Cabasse amplified audio systems.

Please Note

- Used when the amplifier/tuner is mounted remotely.

Common locations:

- Under passenger seat
- Boot / trunk area

Tools Required


- Trim panel removal tools
- Phillips Screwdriver
- Cable ties
- Torch/ work light

Installation Steps

1. Locate the Cabasse amplifier/tuner.
2. Disconnect the factory Yellow Mini ISO connector.
3. Connect the 10-148Y-2.5 inline with the factory wiring.
4. Route the extension cable safely to the dashboard.
5. Avoid seat rails, sharp edges and moving parts.
6. Secure excess wiring with cable ties.
7. Connect the extended wiring to the aftermarket stereo harness.

Testing

- Turn the ignition on
- Confirm radio powers on correctly
- Check all speakers operate normally

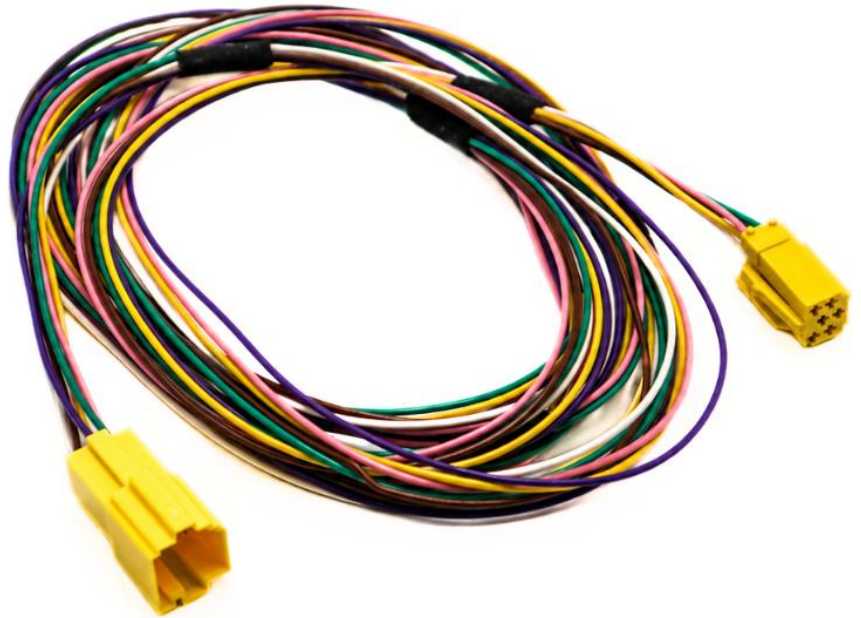

Need Technical Support?

Message our team on WhatsApp: 07770 814 793

Send your questions and photos so we can help you as quickly as possible.



Chat on WhatsApp