

Product Overview

The 10-149-2.5 is a 2.5-metre speaker ISO extension cable. It is used to extend the brown 8-way ISO speaker connection behind a vehicle radio or from a SOT lead.

Please Note

This cable is for the brown speaker ISO connector only. For rear SOT lead installations, two cables may be required.

Tools Required


- Trim panel removal tools
- Phillips Screwdriver
- Cable ties
- Torch/ work light

Installation Steps

1. Switch off the ignition and remove the key.
2. Locate and disconnect the brown ISO speaker connector behind the radio or at the SOT lead.
3. Plug the 10-149-2.5 cable between the two matching brown ISO speaker connectors.
4. Route the cable to the required position, making sure it is not trapped, stretched, or near moving parts.
5. Secure the cable and refit any removed trim.

Testing

- Switch on the audio system
- Check that all speakers are working.
- Ensure that every speaker is working by using fader / balance controls or putting your ear near the speaker

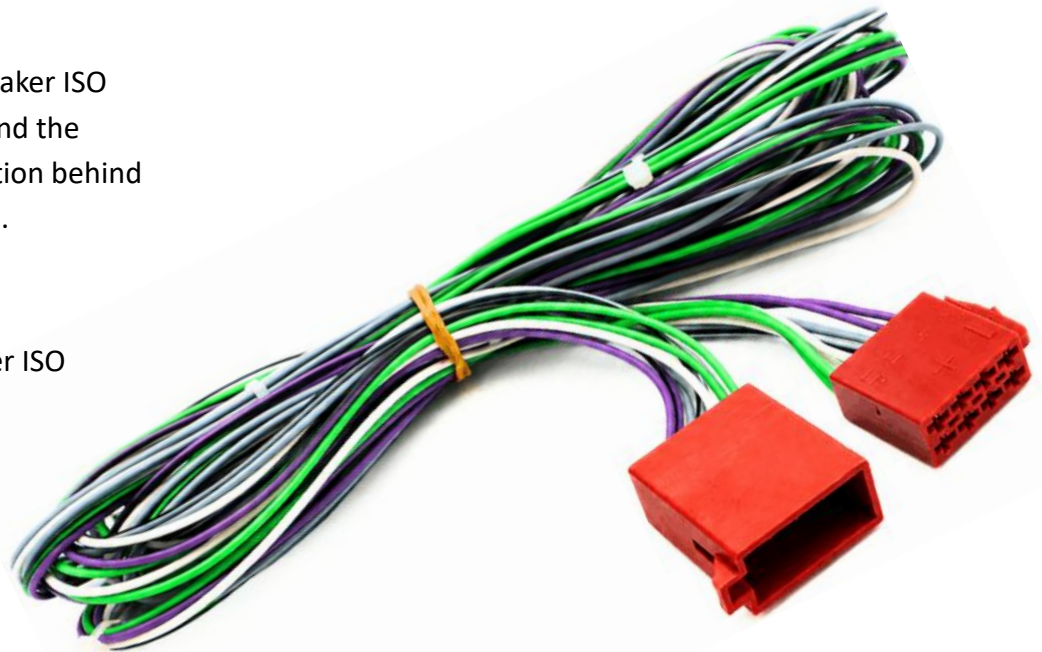

Need Technical Support?

Message our team on WhatsApp: 07770 814 793

Send your questions and photos so we can help you as quickly as possible.



Chat on WhatsApp