


**1-ALWAYS CONNECT THE HEAD-UNIT CABLE ADAPTER 1st before ignition is turned on!**

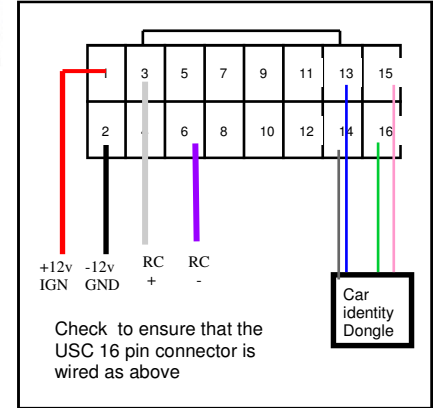


Check to ensure that the USC 16 pin connector is wired as above


Under Steering Column

1. Choose a head-unit adapter from the list overleaf and connect it to the USC black box.
2. Turn off the ignition supply to the car!
3. Remove the OEM head-unit and connect the black ISO connector with the 29 series cable.
4. Remove the drivers underdash cowling and locate green 3 way Cinch Connector housing. Connect the 29 series connector to this.
5. Check that the red wire is a 12V IGNITION source in the car then turn on ignition
6. Test unit before fully fitting radio and trims back.

**If Problems:** Check that correct adapter has been used and links are in the correct place. Always disconnect from the power supply if you change the head-unit adapter lead. Check that Red wire is 12V ignition and not Permanent power. Check that head-unit is earthed and black wire is earth. Check all connections are the same as the wiring diagram shown here

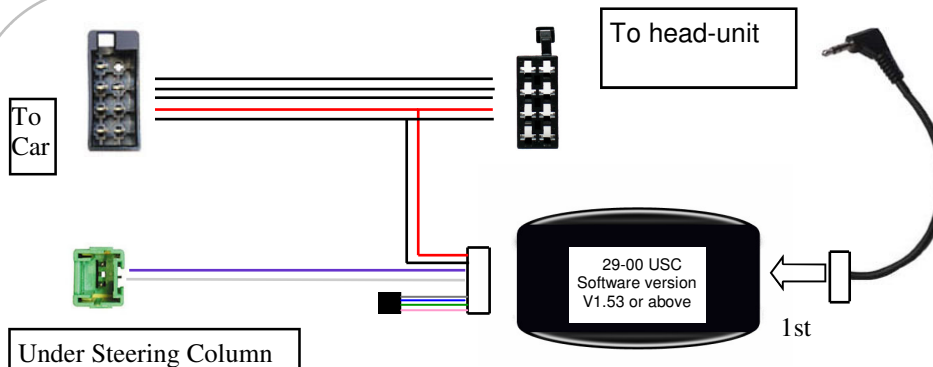

**1-ALWAYS CONNECT THE HEAD-UNIT CABLE ADAPTER 1st before ignition is turned on!**

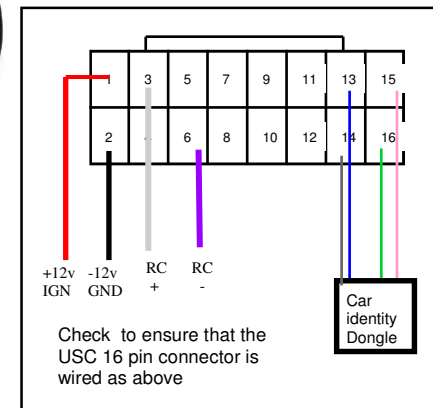

Check to ensure that the USC 16 pin connector is wired as above


Under Steering Column

1. Choose a head-unit adapter from the list overleaf and connect it to the USC black box.
2. Turn off the ignition supply to the car!
3. Remove the OEM head-unit and connect the black ISO connector with the 29 series cable.
4. Remove the drivers underdash cowling and locate green 3 way Cinch Connector housing. Connect the 29 series connector to this.
5. Check that the red wire is a 12V IGNITION source in the car then turn on ignition
6. Test unit before fully fitting radio and trims back.


**If Problems:** Check that correct adapter has been used and links are in the correct place. Always disconnect from the power supply if you change the head-unit adapter lead. Check that Red wire is 12V ignition and not Permanent power. Check that head-unit is earthed and black wire is earth. Check all connections are the same as the wiring diagram shown here

CHOOSE THE CORRECT HEAD-UNIT ADAPTER FROM THOSE BELOW


29-001 Alpine

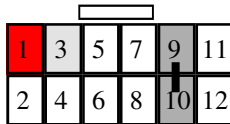


29-002 Blaupunkt

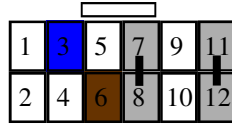


29-003 Clarion

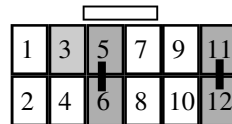


29-004 JVC

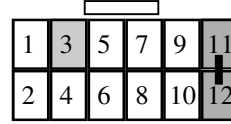


29-005 Kenwood  
Single wire

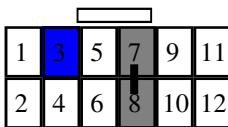


29-005D Kenwood  
4 pin DIN Plug

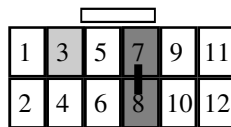


29-006 Panasonic  
Standard CD units

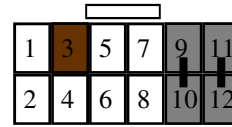


29-006A Panasonic  
AV head-units

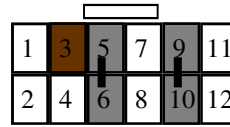


29-009 Siemens  
VDO

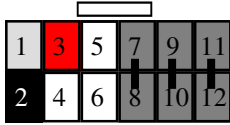


29-008 Sony  
3v & 5v units

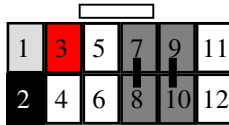

29-011 Zenec

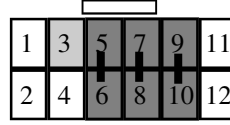


29-020 Pioneer &  
Sony

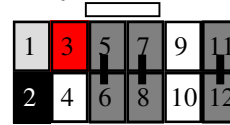


Special external drive  
PCB version

CHOOSE THE CORRECT HEAD-UNIT ADAPTER FROM THOSE BELOW


29-001 Alpine

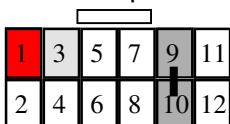


29-002 Blaupunkt

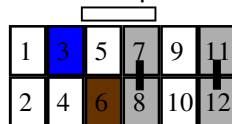


29-003 Clarion

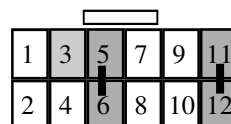


29-004 JVC

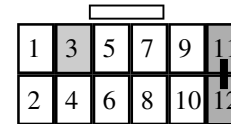


29-005 Kenwood  
Single wire

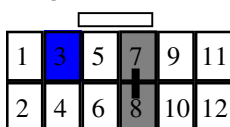


29-005D Kenwood  
4 pin DIN Plug

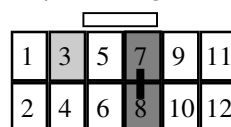


29-006 Panasonic  
Standard CD units

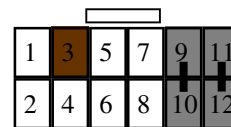

29-006A Panasonic  
AV head-units

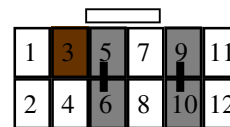


29-009 Siemens  
VDO

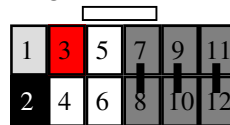


29-008 Sony  
3v & 5v units



29-011 Zenec

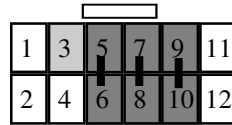

29-020 Pioneer &  
Sony

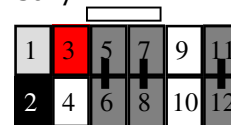

Special external drive  
PCB version