

50-770-BRACKET

Bracket for BMW X5 with OEM navigation

InCarTec




These are instructions for how to use the 50-770-BRACKET to mount a double Din after market radio into a BMW X5 E53 that had original navigation.

Line the 50-770-BRACKET up with the mounting bracket from the 50-770 and drill 2 holes into the plastic brackets.

Take note of how to align the brackets together.


Place the metal bracket tight into the corner shown in the picture.

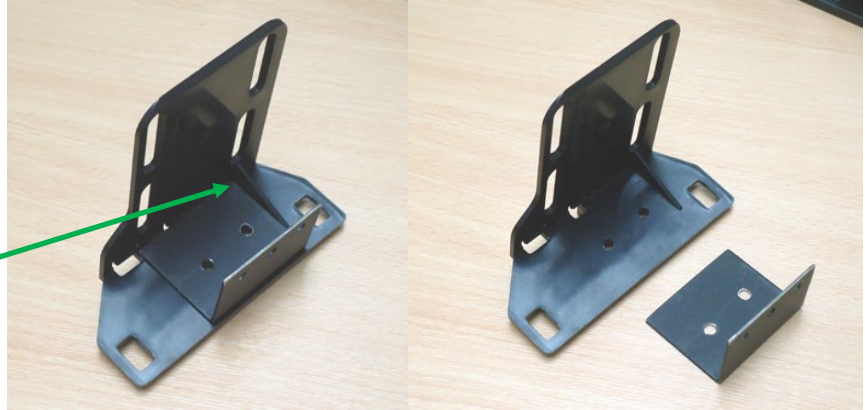

Drill holes into the side of the dashboard to mount the brackets.

Take care to make sure the holes are in the correct positions.

Fix the metal brackets in place.

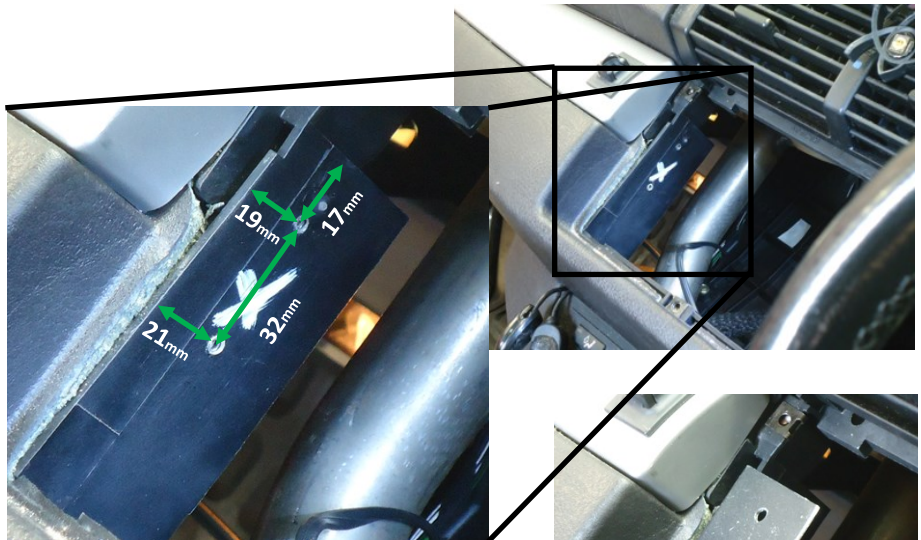

To mount the radio.

In cars with original navigation it is necessary to mount the 50-770 fascia kit upside down, with the thicker edge along the bottom and left and right brackets reversed.

Fix the plastic brackets to the radio, fix the left bracket to the right of the radio and the right bracket to the left of the radio.

The radio with the brackets attached will now mount into the dashboard onto the metal brackets.

Fix in place with some screws/nuts and bolts.

The fascia panel will now clip into place.

*Additional fixing screws are required for this installation.