


Chinese Head Units



Some Chinese and unbranded head units come with ISO leads with bare wire connections. There are two options on how to connect these from the Chinese/ unbranded head unit to the car.

1. If you have purchased one of our Incartec ISO or steering wheel controls leads, you will need to cut off the connectors from our lead and join the loose wires to the Chinese ISO accordingly.
2. The other option is to purchase a Female ISO lead with Butt connectors (20-022) and join the loose wires of the Chinese ISO according to the bullet terminals on our ISO connector.

Installing a 20-022 to a Chinese Head Unit

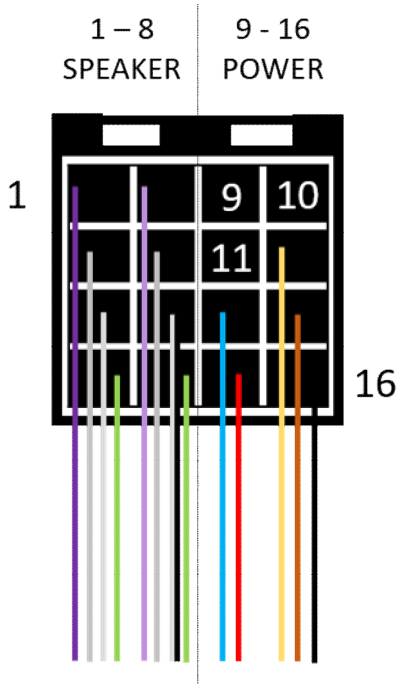

ISO HARNESS			
1	Right Rear Positive	9	Unpopulated
2	Right Rear Negative	10	Unpopulated
3	Right Front Positive	11	Unpopulated
4	Right Front Negative	12	Battery/ Memory/ Constant
5	Left Front Positive	13	Antenna Turn On
6	Left Front Negative	14	Illumination
7	Left Rear Positive	15	Ignition
8	Left Rear Negative	16	Ground

