

Chinese Head Units




Some Chinese and unbranded head units come with leads with bare wire connections, rather than the European standard of having 2 x 8pin ISO connectors . There are two options on how to connect these from the Chinese/ unbranded head unit to the car.

1. If you have purchased one of our Incartec ISO or steering wheel controls leads, you will need to cut off the connectors from our lead and join the loose wires to the Chinese ISO accordingly.

2. The other option is to purchase a female ISO to bare wire harness (20-020) and join the loose wires to the Chinese ISO accordingly.

Connecting one of our 29-Series Steering wheel controls to a Chinese head unit

1. If you have purchased one of our Incartec ISO or steering wheel controls leads, you will need to cut off the connectors from our lead.

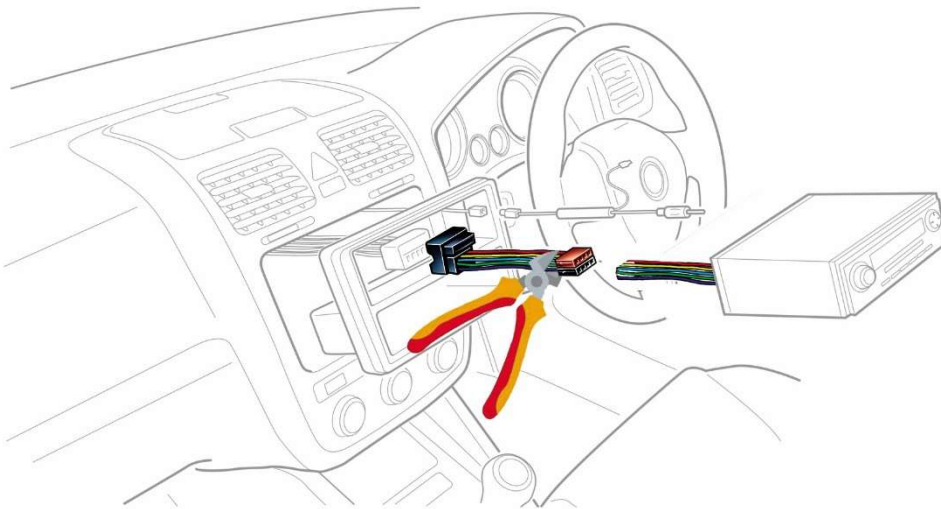

2. Once you have cut off the connectors you will need to join the loose wires of our Steering Wheel Control to the Chinese ISO accordingly.

