


## 27-224

Add a Camera to OEM Toyota Land Cruiser 200 and Lexus models(07-09) with MFD GEN 5 multi-displays (28-Pin connector)

### Installation diagram

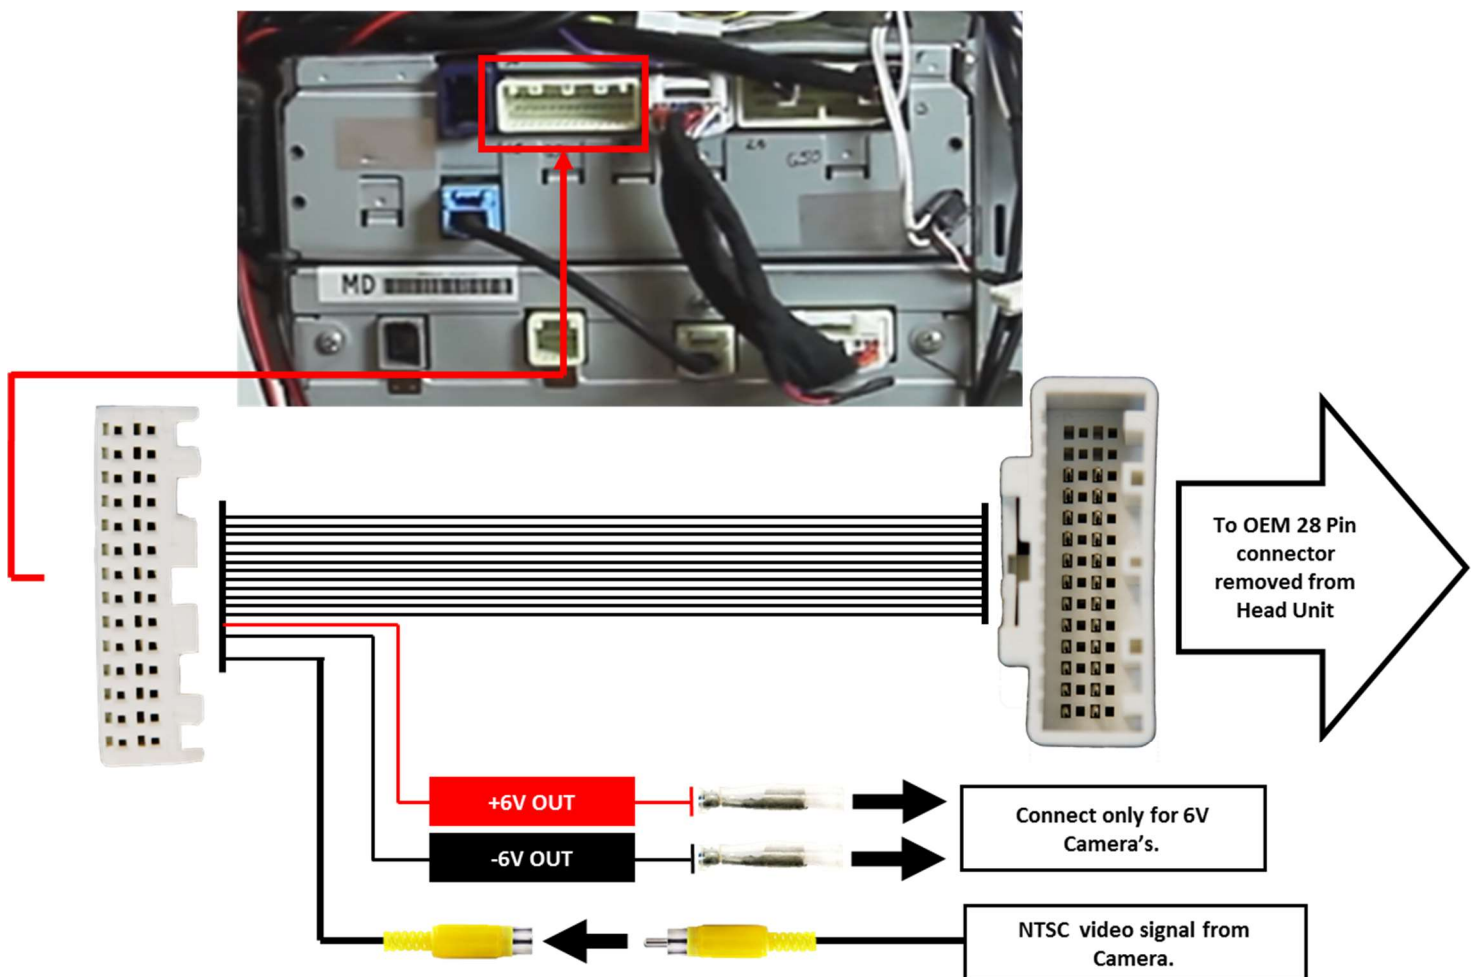

### Installation Instructions

1. **Ensure the vehicle's ignition is off and the key has been removed.**
2. Remove the standard Head Unit with reference to the manufacturer's instructions.
3. Disconnect the 28-pin from the rear of the Head Unit.
4. Connect the 28-pin female connector of **27-224** to the connector just removed from the Head Unit.
5. Connect the male 28-pin of **27-224** connector to the Head Unit.
6. **Only connect the red and black 6V wires to the camera if it needs a 6V power supply.**
7. Test the camera fully before re-installing the Head Unit