
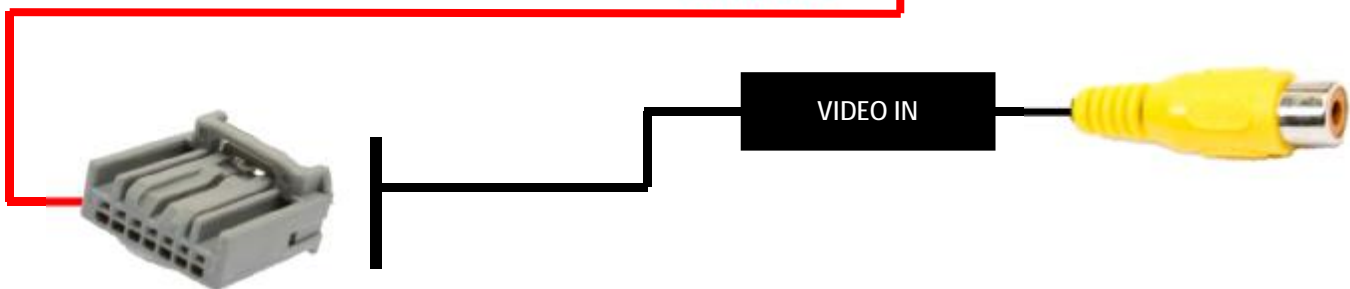


27-233

Add camera to Honda CRV III with 2VN3 Navigation

Installation diagram

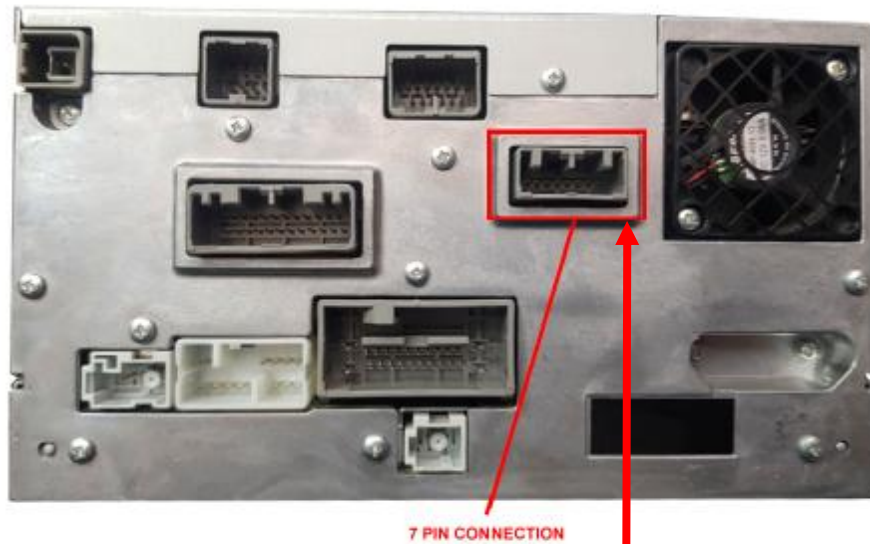

Installation Instructions

1. Ensure the vehicle's ignition is off and the key has been removed.
2. Remove the standard Head Unit with reference to the manufacturer's instructions.
3. Connect the male 7-pin of 27-233 connector to the Head Unit.
4. Connect the VIDEO IN phono connector to the OUTPUT phono connector from the camera.
5. Fit the camera using a reverse feed to power the camera
6. Test the camera fully before re-installing the Head Unit