


27-240

Add a Camera to OEM Mercedes Head Unit

Installation diagram

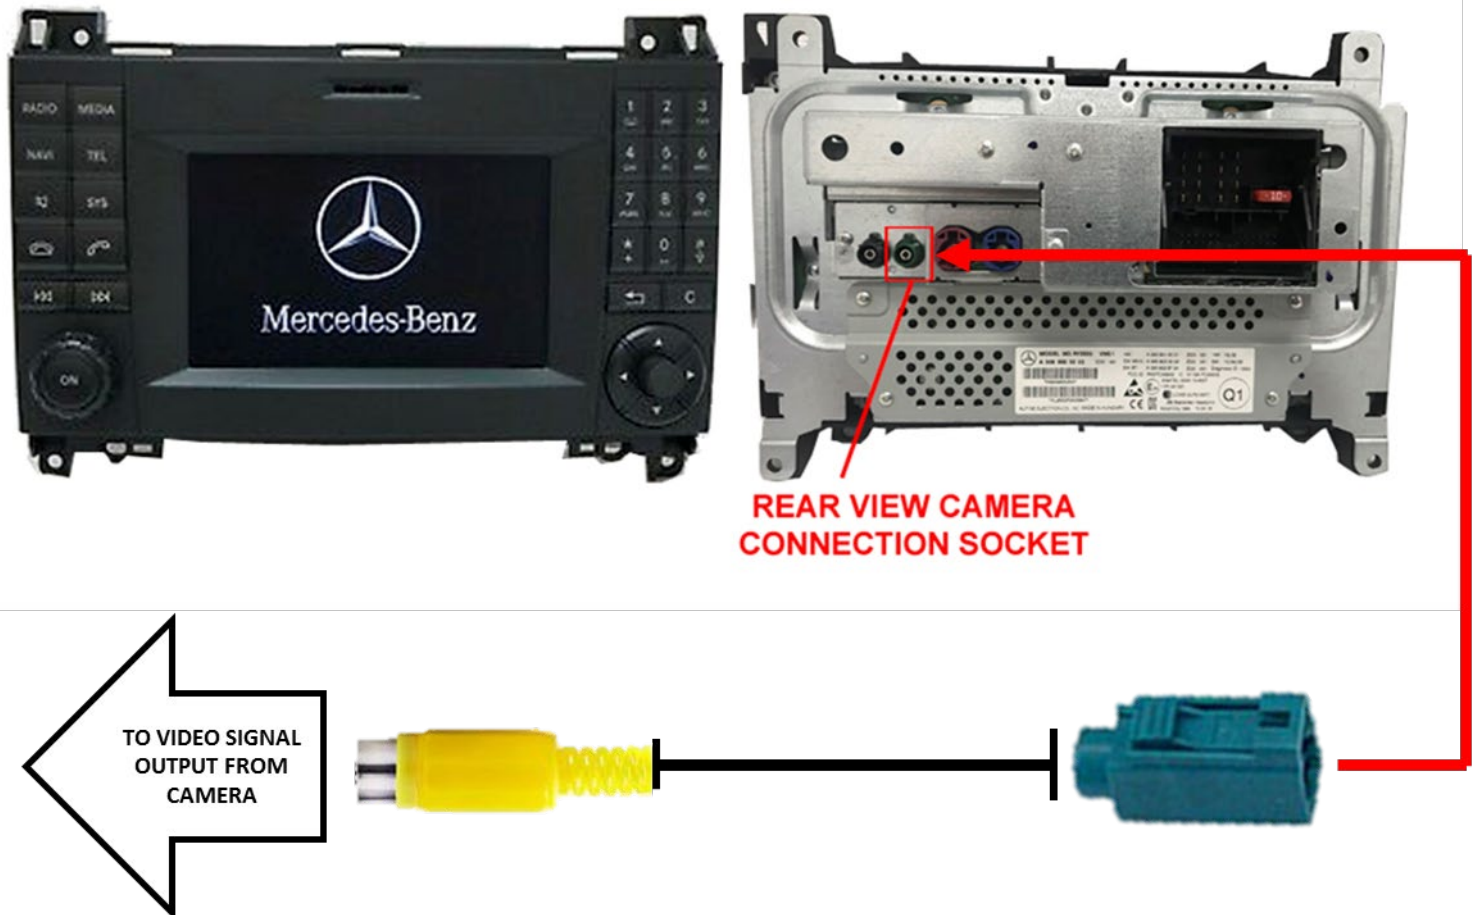

Installation Instructions

1. Ensure the vehicle's ignition is off and the key has been removed.
2. Remove the standard Head Unit with reference to the manufacturer's instructions.
3. Connect the Fakra connector to the rear of the Head Unit as shown above.
4. Connect the yellow phono connector to the NTSC video signal output from the camera.
5. Test the system fully before re-installing the Head Unit.

PLEASE NOTE: The head unit will need to be coded for camera input