



1. Unclip air vents



2. Remove air vents




3. Remove both screws
(see arrows)



4. Pull OEM head unit towards
your direction in order to
remove it



5. Disconnect all cables and remove
OEM head unit

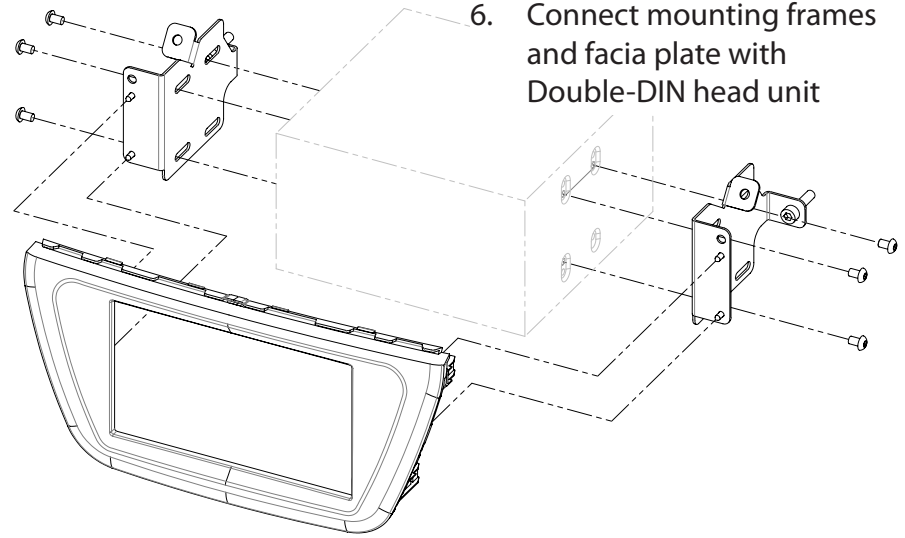

6. Connect mounting frames
and facia plate with
Double-DIN head unit



7. Connect all required circuit points
and push Double-DIN head unit
into dashboard

*All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.*

© 01/2014 ALL RIGHTS RESERVED. Technical changes possible. No liability for misprints.



8. Reinstall air vents to finish installation