


Installation Steps

1. Plug the large black plug into the vehicle connector.

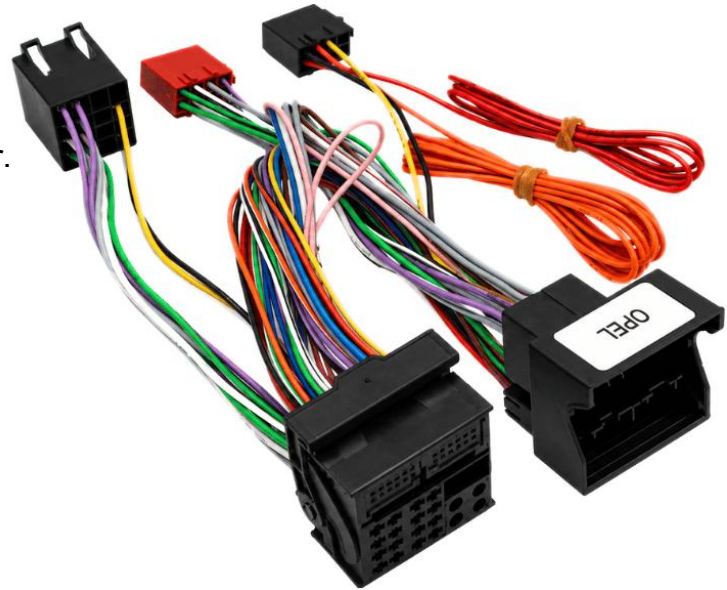

2. Plug the orange plug and black plug into the aftermarket radio loom

3. IF REQUIRED:

Connect the red wire to an ignition / accessory live within the vehicle

A good location for this is normally a cigarette lighter found in the vehicle

4. IF REQUIRED:

Connect the orange illumination wire to an illumination wire within the vehicle

This will automatically dim the radio but is optional

Location will vastly vary across different vehicles

This cable can be used in conjunction with an ISO Mute harness supplied with the hands-free car kit.
Use when fitting handsfree car kits.

Need Technical Support?

Message our team on Whatsapp: 07770 814 793

Send your questions and photos so we can help you as quickly as possible.



Chat on WhatsApp