


50-903 - Installation Manual Double DIN Kit



1. Unclip center console (see arrows) and remove it by pulling it towards your direction



2. Remove OEM head unit

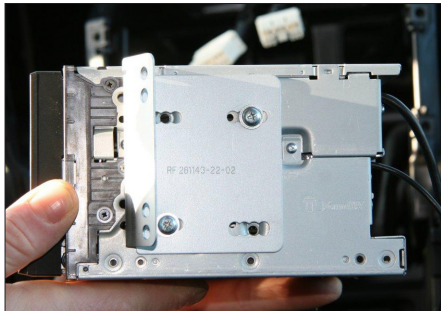


3. Attach mounting brackets to Kenwood head unit



4. Remove hazard light switch and display from OEM bezel



5. Remove OEM panel from center console

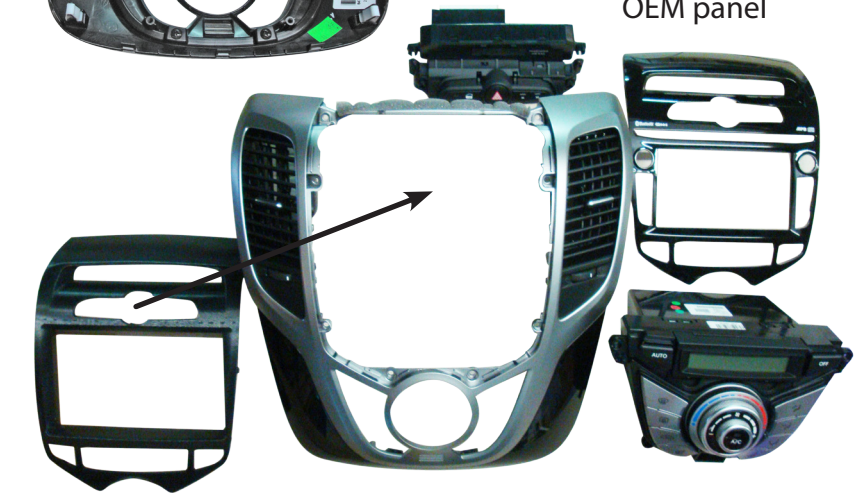

OEM panel

new facia plate

6. Mount new Double DIN facia plate to OEM center panel (see arrow) with OEM screws



7. Center panel with mouted Double DIN facia plate

50-903 - Installation Manual Double DIN Kit



8. Mount hazard light switch and top display to fascia plate



9. Mount air condition control unit to panel



10. Connect all required circuit points
Mount double DIN head unit

Mount center panel to dash board