

Product Overview

The 10-346 is a Saab 9-3 Quadlock direct phone input cable. It is used as a break-out cable to connect the audio output from a hands-free kit, and music audio if supported by the kit, into the vehicle's factory Phone/AUX input.

Please Note

- The AUX/phone input may need to be activated before the cable will work.

Common locations:

- Behind cd unit, lower in the dashboard

Tools Required

- Trim removal tools
- Screwdriver or socket set, depending on the vehicle trim
- Cable ties or loom tape
- Saab Tech2 or suitable diagnostic equipment (if phone activation required)

Installation Steps

1. Switch off the ignition and remove the key.
2. Remove the required trim panels to access the CD unit lower in the dashboard.
3. Locate the Quadlock connector behind the CD unit.
4. Disconnect the vehicle's Quadlock connector.
5. Plug the 10-346 cable between the vehicle Quadlock connector and the CD unit.
6. Connect the hands-free kit or audio source to the input connections on the 10-346 cable.
7. Secure the cable, making sure it is not trapped, stretched, or near moving parts.
8. Refit the CD unit and any removed trim.
9. If required, activate the AUX/phone input using Saab Tech2 or suitable diagnostic equipment.


Testing

- Switch on the ignition and audio system.
- Select the Phone or AUX source on the factory radio.
- Play audio or make a test call through the connected hands-free kit.
- Check that the sound plays through the vehicle speakers.
- If no audio is heard through AUX, check whether the AUX function needs to be enabled with Tech2.

Need Technical Support?

Message our team on WhatsApp: 07770 814 793

Send your questions and photos so we can help you as quickly as possible.

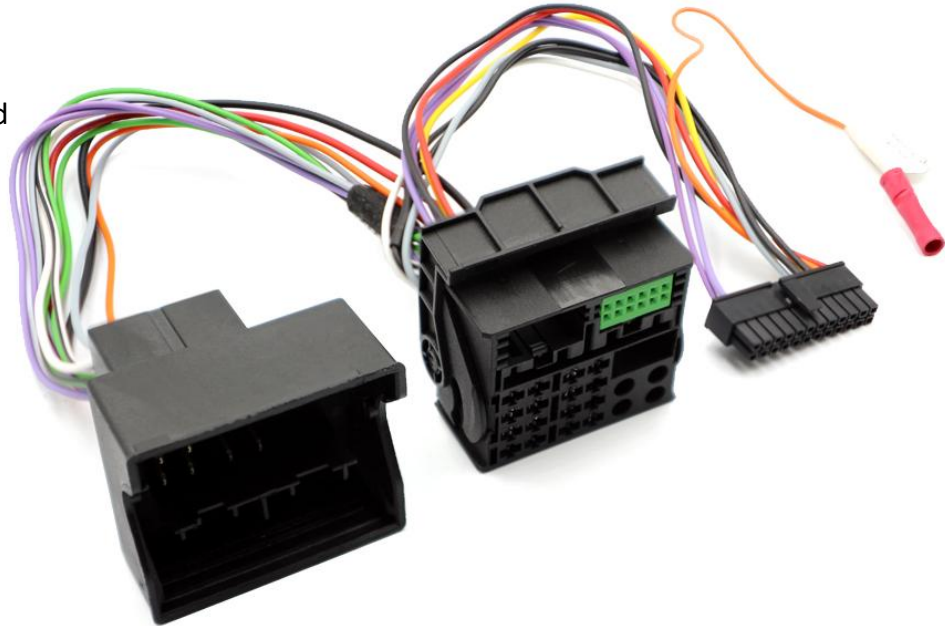

Chat on WhatsApp