


**PLEASE NOTE:** This fascia requires modifications to the vehicle's dashboard. We recommend this be carried out by an experienced car audio technician. The OEM stereo cannot be reinstalled once modifications have been made.

### STEP ONE

To install a double DIN stereo in the vehicle, adequate space must be made by cutting the sub-dash.

Remove the shaded area of the sub-dash using appropriate tools as shown in Figure 1 (Right)

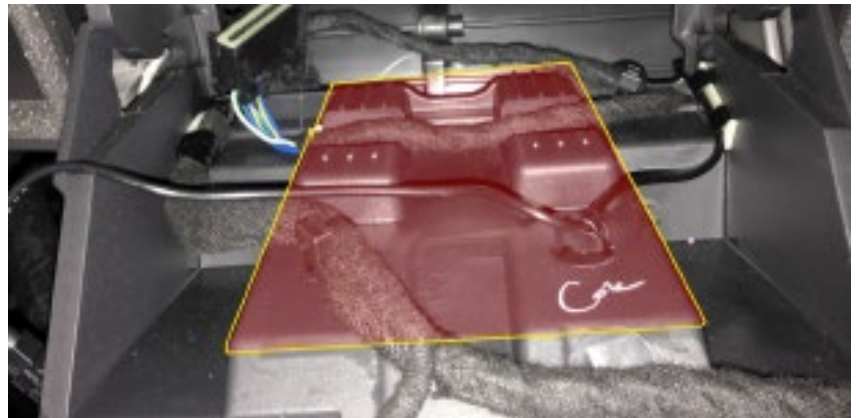

### STEP TWO

Both left and Right-hand vents must be modified before being reinstalled into the new fascia panel.

Remove the raised plastic area at the location highlighted in Figure 2 (Below)



Next, Remove the screw clip circled in Figure 3 (Below)



**Ensure both vents have been modified in this way before reassembly.**