

## Note on the Mercedes cable set: 17004:

- Stand 10.03.15, rev0 -

The cable set is required for all Mercedes vehicles from the W211 series, E-Class, BJ. 2002-2009, where the electronics unit (including amplifier) is located in the trunk. This bridges the amplifier and the existing cabling can be used to retrofit a car radio with ISO connections can be used.




### 1. Cable laying:

We recommend routing the cable set to the front on the left side of the vehicle and running it across to the center console in front of the left front seat.

Connections in the trunk on the amplifier:



14 pin Plug for speaker, 4 pin. Remove the power plug and antenna plug from the electronics unit (including the amplifier) and connect it to the 2 plugs of the 17004 cable set. Additionally the Connect the antenna cable (Fakra antenna plug, water blue).

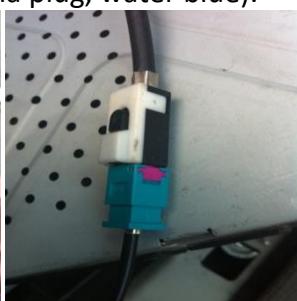

The white loose cables are required if the vehicle's subwoofers (if available) are also to be connected. An additional amplifier is necessary here.

The individual white cables with the outputs of an additional amplifier are as follows to connect:

Pin 1: Subwoofer 1 plus, Pin 2: Subwoofer 1 minus,  
Pin 3: Subwoofer 2 plus, Pin 4: Subwoofer 2 minus,

## 2. Connections for the aftermarket radio

ISO connector, antenna DIN connector

### A notice:

*The Can Bus Interface 66030 and the cable set 66146 are optionally available for the steering wheel remote control. Depending on the radio brand, the radio-specific cable 6640x is also necessary.*

*The CAN BUS distributor is located in the passenger footwell (under the glove compartment at the top left):*

*Here the 2 pole can be used. Black plugs from cable set 66146 can be connected directly to the green/white wires.*



OPTIONAL CAN BUS INTERFACE 66030

