


LAND ROVER DISCOVERY 3 / RANGE ROVER SPORT/ VOLVO XC90
SUBWOOFER AMPLIFIER COMPLETE FITTING KIT



- Additional Components needed**
- 1 Amp Fuse with inline holder
 - Solder/ Crimp connectors
 - Heat shrink/ self- amalgamating tape

Part Number	Product Description	Image
BL-RA251D	BLAM Ultra-compact D Class 1 x 250W monoblock amplifier	
CAB-VOL-AMP-T	Volvo and Land Rover Power T Lead	
32-108	RCA 3 Metre Phono Cable	
LO7U/W	3 Metre Amplifier Turn on Cable	

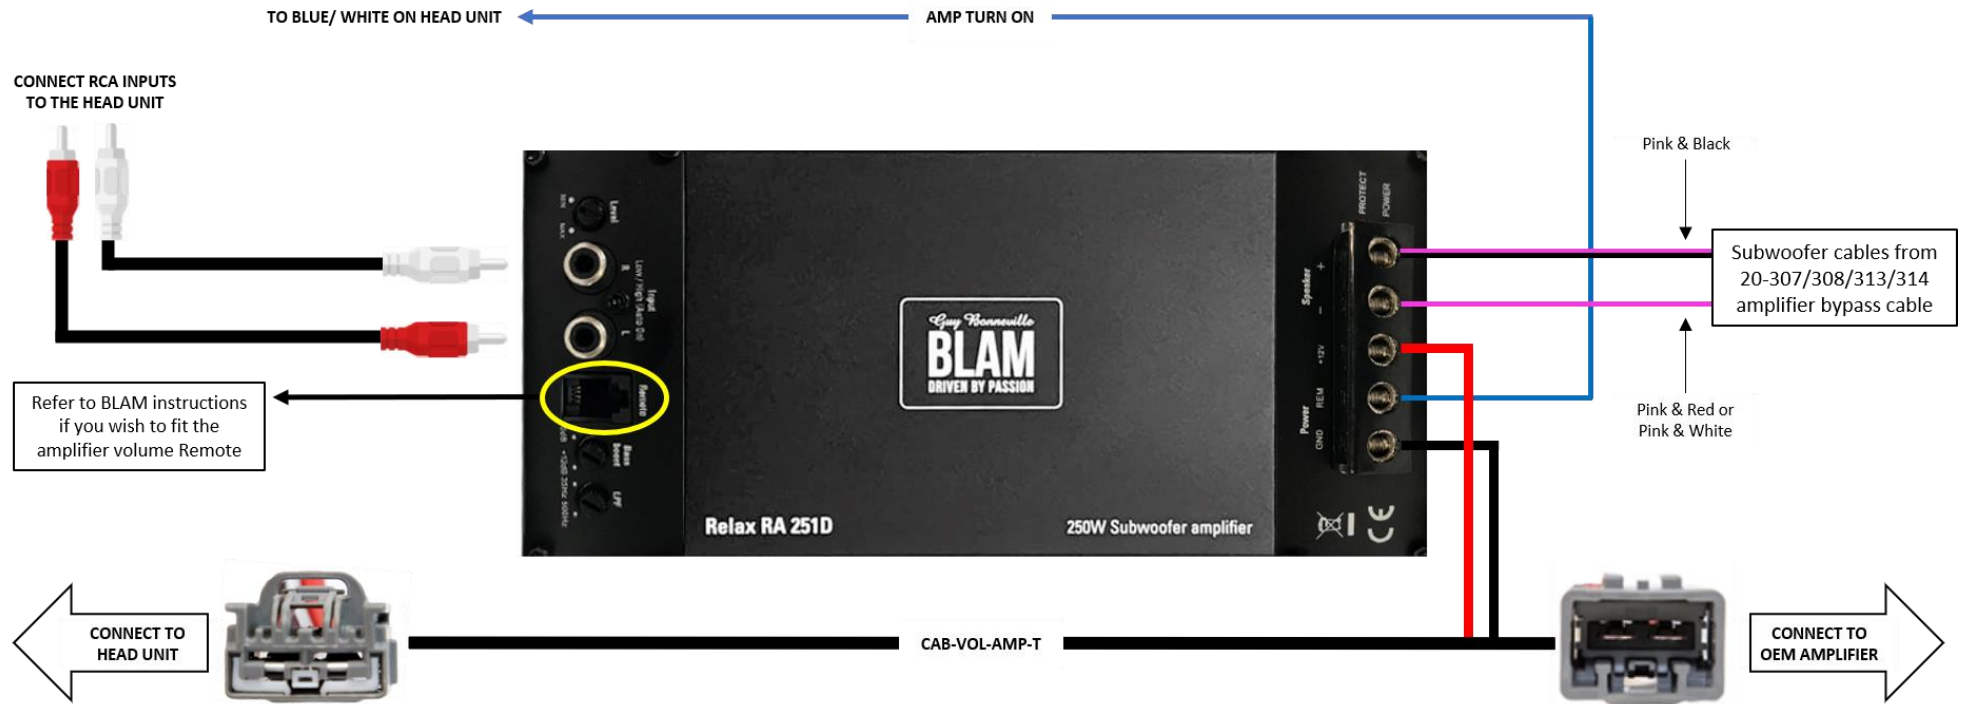

INSTALLATION INSTRUCTIONS

Refer to the vehicle specific interface fitting kit instructions first. DO NOT REFIT THE HEAD UNIT AFTER FITTING THE INTERFACE KIT

1. Make sure the vehicle is off with the key removed.
2. Remove the original Head Unit with reference to the manufacturer's instructions.
3. Locate the vehicle's OEM Amplifier. Disconnect the large male connector from the amplifier and connect the T lead included in AK-LR-01 to this connector just removed. Connect the male connector of the T-Lead back to the OEM Amplifier.
4. Find a suitable place to mount/store the amplifier. We recommend under the passenger seat.
5. Connect the ground and 12V power cables from the T lead to the Amplifier via the screw connectors on the amplifier.
6. Connect the phono RCAs
7. Run the RCA cable up to the rear dash board and connect the two phono connectors to the new Head Unit.
8. Connect the pink/black or pink-white from the bypass cable to the output on the side of the amplifier box (see diagram)
9. Make sure all wires to the various components around the car are safely secured.
10. Test the system fully before refitting the Head Unit, amplifier and subwoofer.