


This camera retention interface allows you to retain the original OEM factory fitted camera on a Honda 2VN0 navigation system when installing a new aftermarket head unit.

This interface is suitable for 2VN0 units with the Green 7 PIN connector on the back of the original navigation unit.

PLEASE NOTE: For 2VN0 Navigation Systems only. Please check connections on the OEM radio for compatibility

INSTALLATION DIAGRAM

PLEASE NOTE: The diagram below shows an overview for the installation of this product. Please turn over the page for step by step instructions.

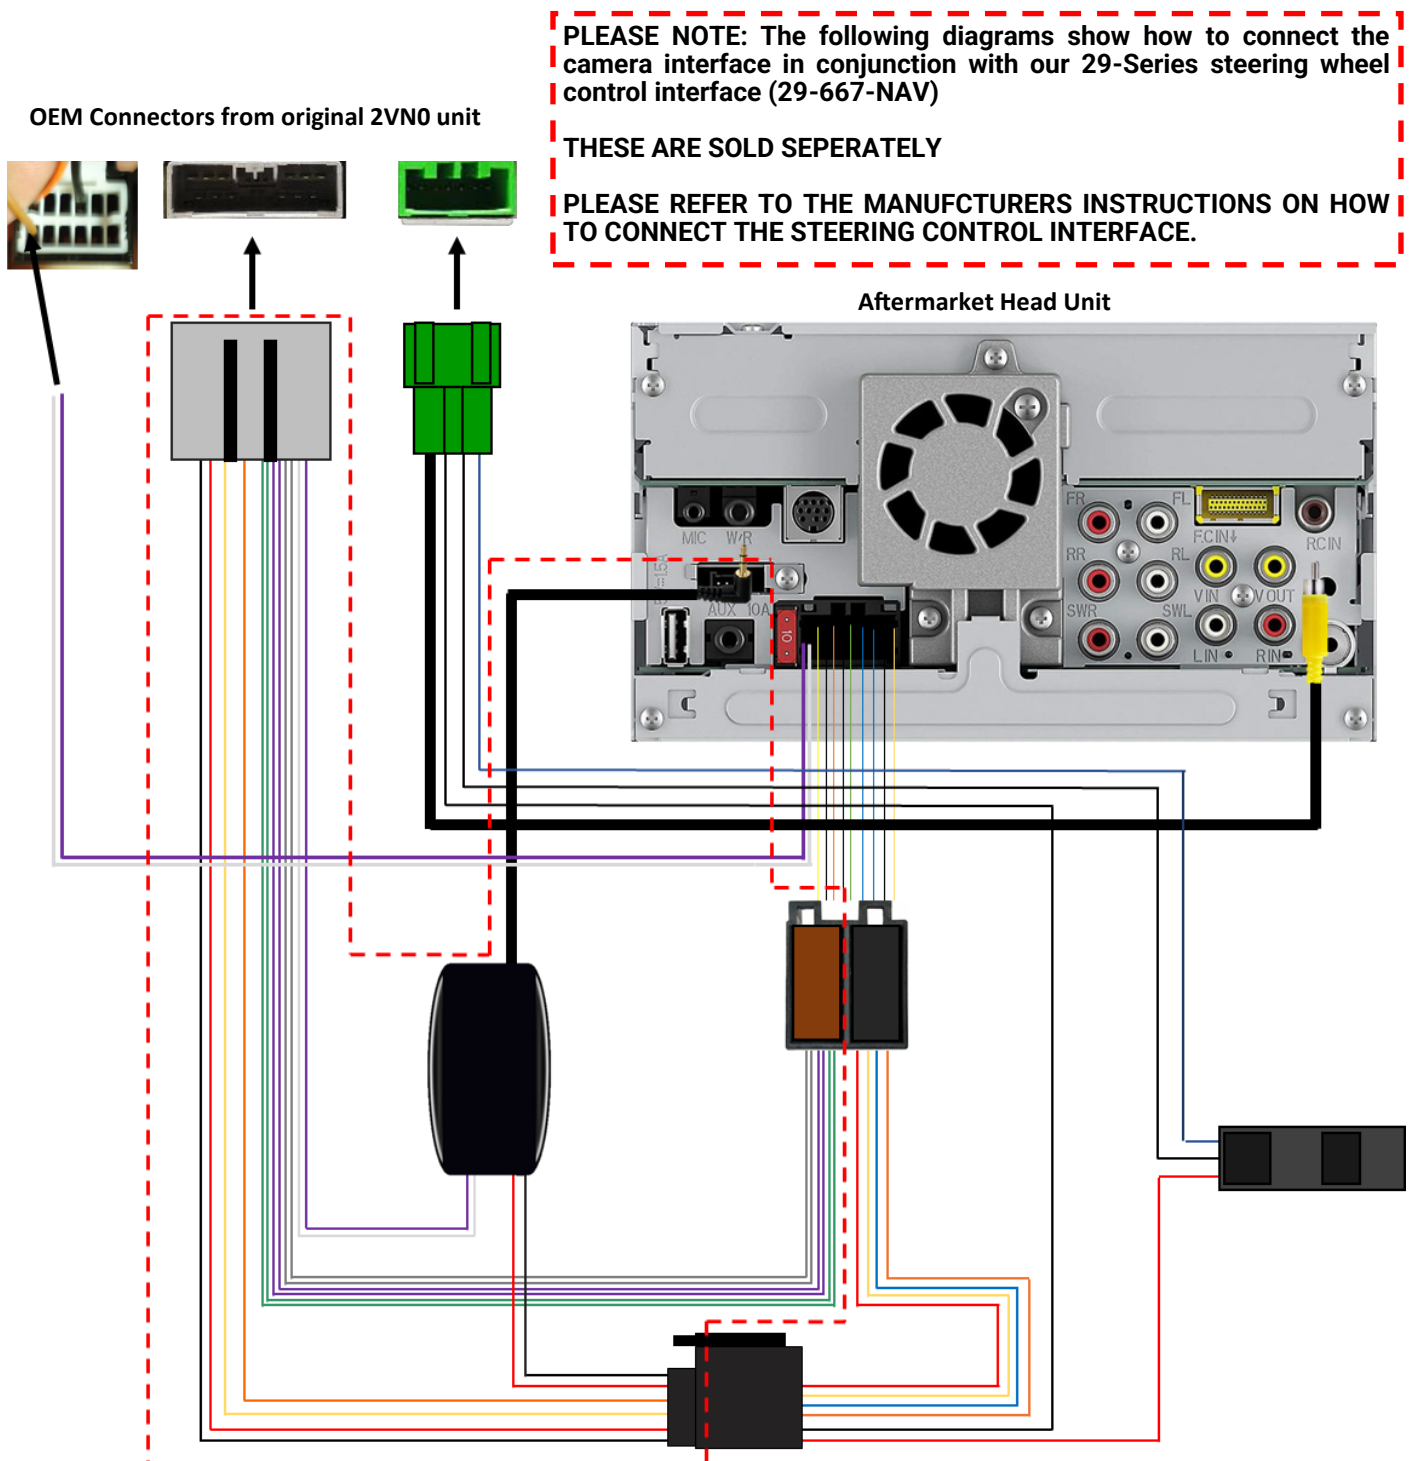


PLEASE NOTE: The following diagrams show how to connect the camera interface in conjunction with our 29-Series steering wheel control interface (29-667-NAV)
THESE ARE SOLD SEPERATELY
PLEASE REFER TO THE MANUFACTURERS INSTRUCTIONS ON HOW TO CONNECT THE STEERING CONTROL INTERFACE.

OEM Connectors from original 2VN0 unit

Aftermarket Head Unit


INSTALLING WITH AFTERMARKET SWC INTERFACE

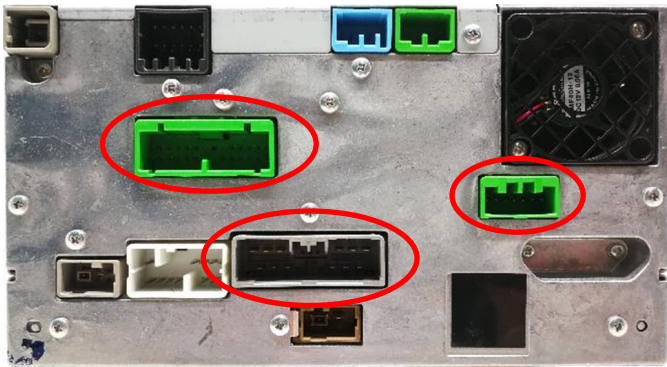

1. Disconnect the original OEM radio from the car. Make a note of the connections highlighted (Left Image)
2. Set up your aftermarket head unit as per the manufacturers instructions
3. Plug in the car specific Steering wheel interface as per the manufacturers instructions.


NOTE: Make sure you leave the Black ISO connector from the steering wheel control interface unplugged, this is used in the next step of the installation.

The installation should be starting to look a little something like this

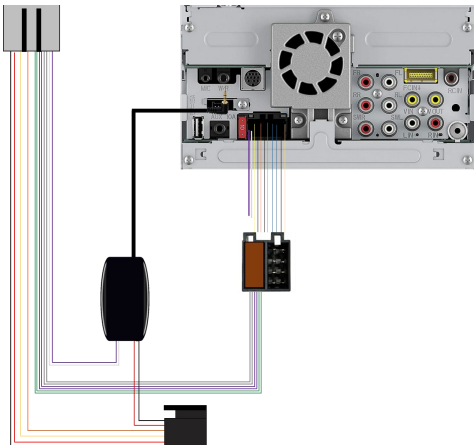

STEP 4


Connect the black ISO from the steering wheel interface (A) to the female ISO connector on the camera interface (B) **Then** Connect the Male ISO connector of the camera interface (C) to the wiring loom of the aftermarket head unit (D)

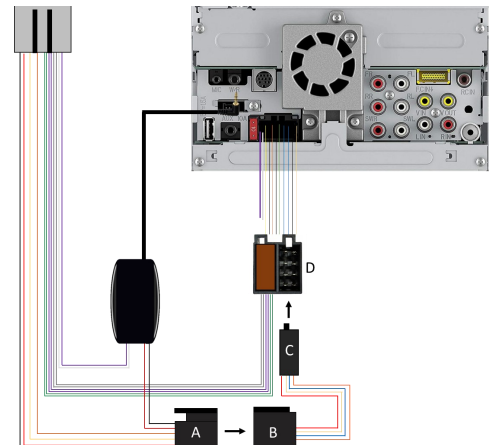

STEP 5

Connect the male RCA Plug of the camera interface to the camera input of the aftermarket head unit. This is usually a Brown Female RCA connection on the back of the unit but can vary depending on the manufacturer.


NOTE: Refer to the manufacturers instructions to confirm camera input connection.

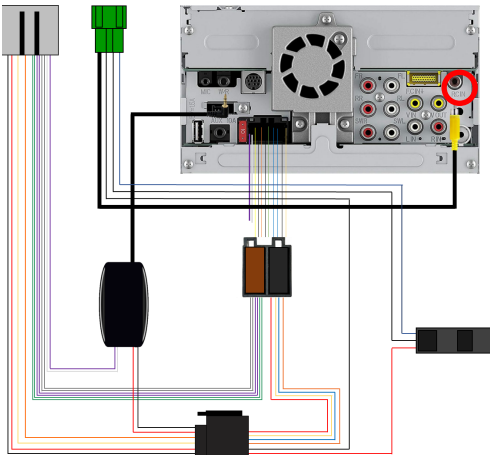

STEP 6

Connect the loose reverse wire (Usually a Purple/White wire) leading out from the aftermarket radio wiring harness, to the bottom left of the 12 PIN White connector that was connected to the original radio.

NOTE: These colours can vary depending on the make of head unit. Please refer to the manufacturers instructions.

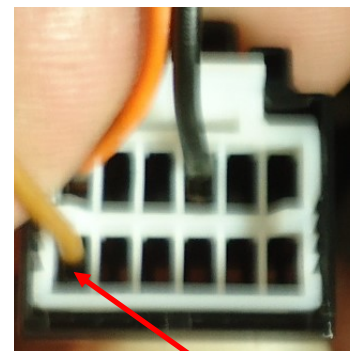


Bottom left of connector

STEP 7

Make the necessary connections to the wires leading out from the original radio. These are all shown in the diagram on the right.

NOTE: The Grey connector should look similar to the ones shown on the back of the OEM radio in step 1

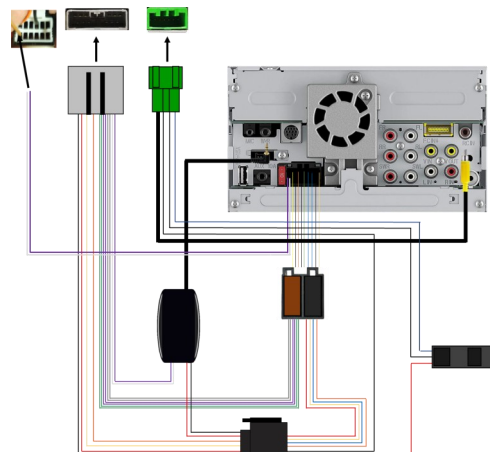

STEP 8

Go into the menu settings on the aftermarket head unit to activate/turn on camera.

NOTE: Picture is for demonstration purposes only and varies depending on the head unit you are installing. Refer to the manufacturers Instructions on how to do this.

