


**OEM FORD 4.2" SCREEN**

**Installation Instructions**

1. Remove the display and disconnect the harness from behind
2. Add the harness between the vehicles original wiring and the screen
3. Connect the Yellow RCA to the backup camera input of the aftermarket head unit/radio

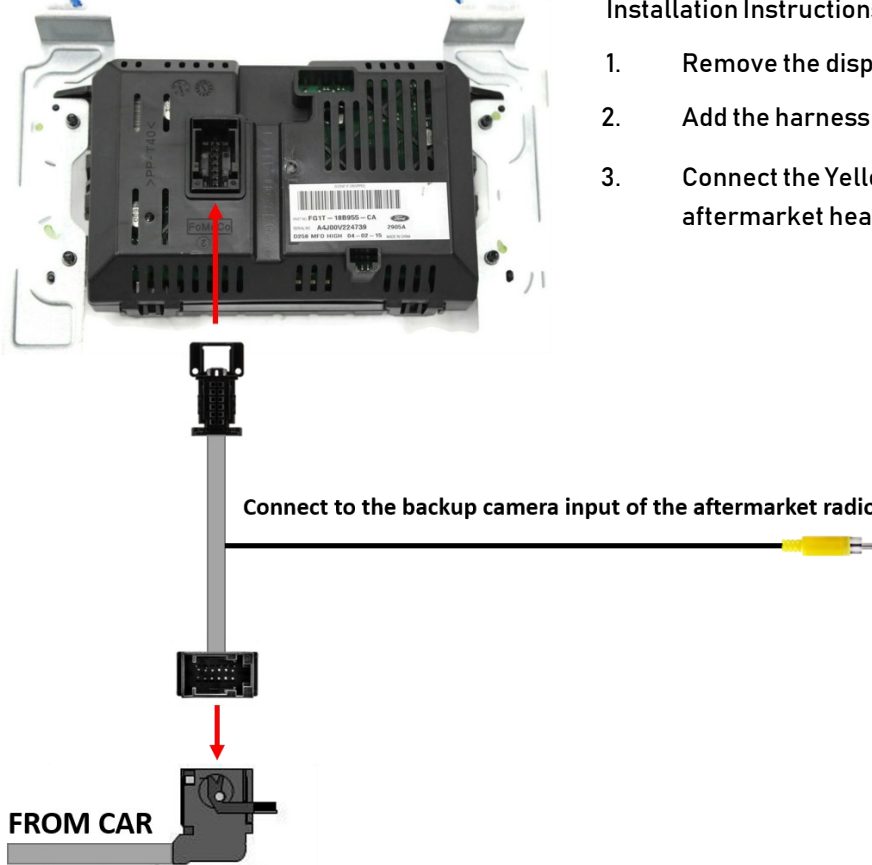

**OEM FORD 4.2" SCREEN**

**Installation Instructions**

1. Remove the display and disconnect the harness from behind
2. Add the harness between the vehicles original wiring and the screen
3. Connect the Yellow RCA to the backup camera input of the aftermarket head unit/radio

