



Hyundai **Tucson** (with NAV) / **Tucson** (with 4.3" screen) **2014-2015**

KIT FEATURES

- ISO DIN radio provision with pocket
- Painted matte black

KIT COMPONENTS

- A) Radio trim panel • B) Radio brackets • C) Pocket • D) (4) #8 x 3/8" Phillips screws

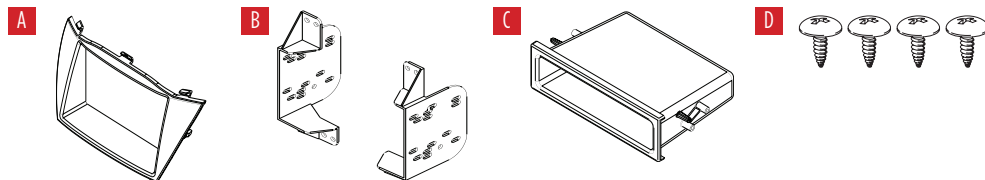


TABLE OF CONTENTS

Dash Disassembly	2
Kit Assembly	3

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: 70-7304 • AX-HYKIA1-SWC
& AX-HYKIA-SPDIF (for amplified models)

Antenna Adapter: Not required

TOOLS REQUIRED


- Panel removal tool • Phillips screwdriver

CAUTION! All accessories, switches, climate controls panels, and especially air bag indicator lights must be connected before cycling the ignition. Also, do not remove the factory radio with the key in the on position, or while the vehicle is running.


DASH DISASSEMBLY

1. Unclip and remove the trim panel above the radio. (Figure A)
2. Unclip and remove the hazard switch panel. (Figure B)
3. Remove (4) Phillips screws securing the radio. Slide the radio out, then unplug and remove the radio. (Figure C)


Continue to Kit Assembly

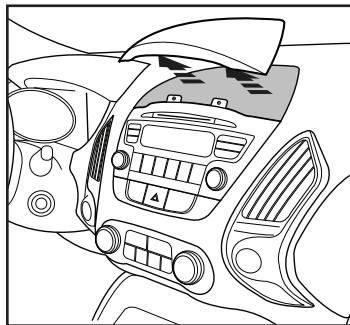

(Figure A)

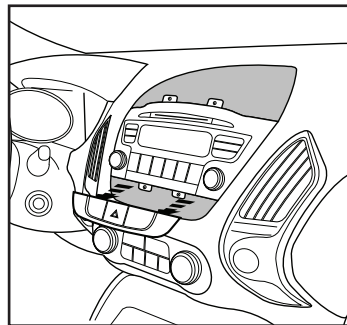


(Figure B)

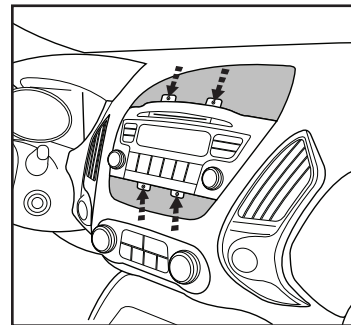


(Figure C)

KIT ASSEMBLY

1. Secure the *pocket* to the *radio brackets* using the (4) #8 x 3/8" Phillips screws provided. (Figure A)
2. Remove the metal DIN sleeve and trim from the aftermarket radio.
3. Secure the radio to the bracket/pocket assembly using the screws supplied with the radio. (Figure B)
4. Locate the factory wiring harness and antenna connector in the dash and complete all necessary connections to the radio. Metra recommends using the proper mating adapter from Metra and/or Axxess. Test the radio for proper operation.
5. Secure the radio assembly to the dash using the factory screws.
6. Clip the *radio trim panel* over the radio assembly, then reassemble the dash in reverse order of disassembly to complete the installation.

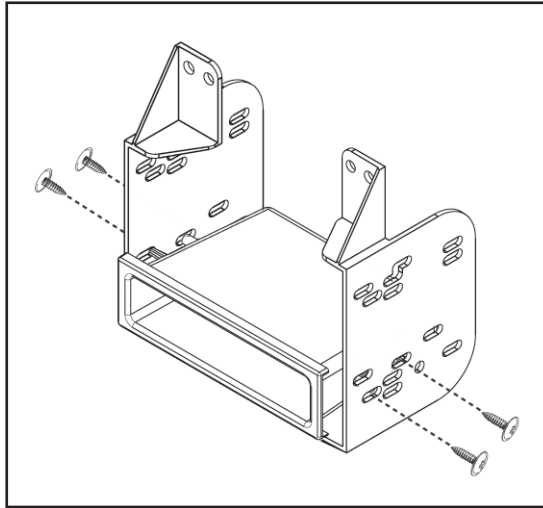

(Figure A)

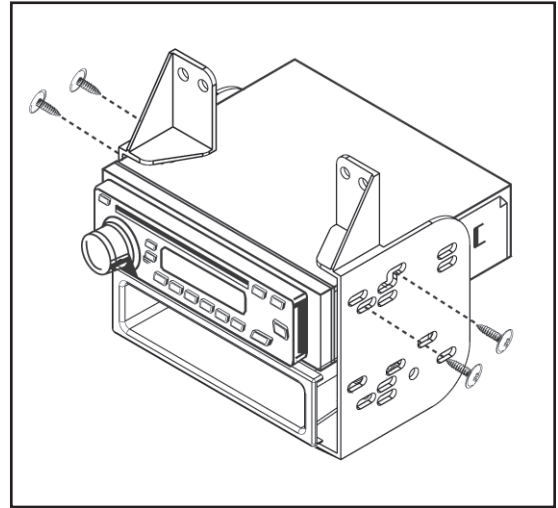

(Figure B)