



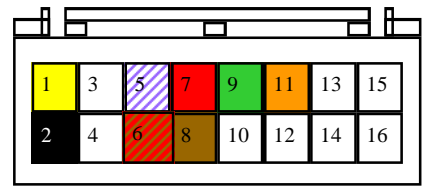

Steering Control Functions:


Volume up
 Volume Down
 Seek Up
 Seek Down
 Source

CAN Service
 Steering Control
 Handbrake
 Reverse
 Illumination
 Ignition 12V

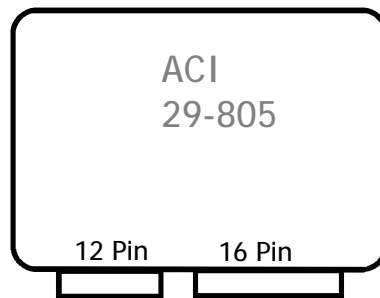


1- Yellow	Battery in	9- Green	Handbrake
2- Black	Ground	10-NC	
3- NC		11- Orange	Illumination ou
4- NC	Speed pulse	12-NC	
5- Purple/White	Reverse	13-NC	
6- Brown/Red	CAN High	14-NC	
7- Red	Ignition out	15-NC	
8- Brown	CAN Low	16-NC	

Radio patch lead
 29-xx
 Supplied separately

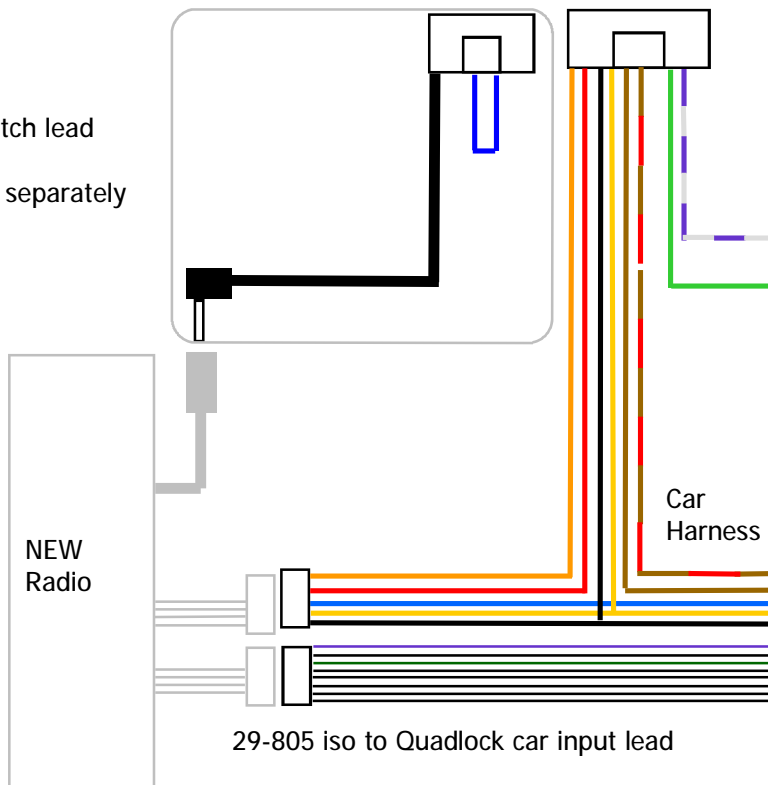

Purple/white- Reverse +12V
 Green— Handbrake

29-805 Connector– Wire Entry Side

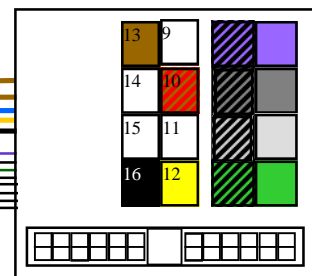

9-Brown/Red	CAN high
10-Brown	CAN low
11-NC	
12-Black	Ground
13-NC	
14-NC	
15-Yellow	Battery 12V
16- NC	

1. Connect the 12 pin Head-unit adapter (see overleaf for models) to the main ACI Black box. **It is very important that this lead is connected before any power is supplied to the unit.**
2. Make sure that the 16 pin connector is plugged in .
3. Connect the radio ISO connectors to the ACI harness and then the Quadlock connector to the car's original connector.
4. Turn on the key ignition and check to see that 12V power is being supplied to the new radio.
5. Check the steering functions
6. Connect ground to car chassis to prevent audio noise

Note. To reset the ACI unit (to plug in a different Head-unit adapter) remove the power supply three times.

Ignore the microswitch between the two connectors . The normal correct position for this switch is towards the larger 16 pin connector.

29-805 Operation instructions for Peugeot cars



1- Press SEEK UP
1- Long press AUTO SEEK

2- Scroll PRESET SEEK

3- Short press SEEK DOWN

4- Press VOLUME UP

5- PRESS SOURCE

6- Press VOLUME DOWN

To Access the cars settings MENU .. This allows you to change date and time etc



Press SEEK up and SEEK down at the same time for 2 seconds to activate the MENU function
Use the vol up , vol down, seek up and seek down to scroll through the menu and use the SOURCE button to confirm the selection (this is the same as the OK button on the original RD4 radio)
After using the confirm selection OK.. You will need to activate the menu again by pressing the SEEK up and down buttons again.

CHOOSE THE CORRECT HEAD-UNIT PATCH LEAD FROM THOSE BELOW

IMPORTANT NOTE :Patch lead Item 29-020 Pioneer/Sony IS NOT SUPPORTED on CAN

29-000
Fixed Voltage 2 wire

29-001
Alpine
Link 9&10

29-003
Clarion
Link 5&6, 11&12

29-004
JVC jack or wire
Link 11&12

29-002
Old Blaupunkt

29-005
Kenwood Single wire
Link 7&8

29-005 D
Kenwood Din or wire
Link 7 & 8

29-007-3v
Pioneer 3 volt
Link 5&6 , 7&8

29-008
Sony
Link 7&8 , 9&10

29-016
Fixed Voltage jack